

## Table of Contents

Important Safety Information .....	2
General View .....	6
Control Buttons on the Display .....	7
Connecting the external IR Receiver .....	8
Turning the Display On/Off .....	8
Infrared Overlay Touch Screen .....	10
Remote Control .....	11
General Use .....	12
Initial Setup .....	12
Home Screen .....	13
Display Settings Menu Content .....	13
Android Menu Content .....	18
Installing Third Party Applications .....	19
Connectivity .....	19
APPS .....	21
Internet Browser .....	22
Vsign Lite .....	22
Media Player .....	23
CEC and CEC RC Passthrough .....	24
Changing the Start and Settings URL's .....	25
OSD Rotation Support .....	25
USB TYPE-C .....	25
HDMI Out .....	25
Real Time Clock (RTC) .....	25
Crestron Connected .....	26
Controlling With An External PC .....	26
RS232/LAN Command Table .....	28
RS232 HEX Commands .....	35
Maximum Pixel Rates .....	39
Input Matrix .....	39
Supported Media Formats from USB .....	40
System Features .....	44
OPS PC .....	45
OPS PC .....	48
Federal Communication Commission Interference Statement .....	51
Accessories Included .....	51
Information for Users on Disposal of Old Equipment and Batteries .....	51
Licence Notification .....	51
Vesa Wall Mount Measurements .....	52
Installation On An Indented Wall .....	53

## Important Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**OPS USAGE WARNING:** Do not plug the OPS unit while the Display is turned on. Turn on the OPS unit using the remote control or the buttons on the Display, do not turn it on using the buttons on the device itself.

### Please read these instructions fully and carefully before use and keep for future reference

**WARNING:** This device is not intended for use by persons (including children) without physical, sensory or mental capabilities, or lack of experience and/or knowledge unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.

- This product is for indoor use only.
- Use this product at an altitude of less than 5000 metres above the sea level and in dry locations and in regions with moderate or tropical climates.
- Please keep this manual for further use.
- Unplug your product before starting to clean. Do not clean the product when it is on. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. If that does not help, please use LCD display cleaners. Do not apply the cleaner directly on the product.
- To prevent breakdown, do not use non-advised accessories.
- Please do not place your product near wash basins, sinks, water pans, pools, etc.
- Do not expose the product to dripping or splashing of liquids and do not place objects filled with liquids, such as vases, cups, etc. on or over the product (e.g. on shelves above the Display).
- Please leave at least 5 cm of free space between the product and walls or other furnitures for ventilation purposes.
- That product can only be started by the defined power source on its rating plate. For further information, please contact with your dealer.
- As a safety precaution, a three-wired grounding plug is given with the product. As a safety precaution,

please do not make any change on the grounding plug. Always use earthed socket outlet for product.

- Please provide the plug and socket to supply the needed power for appliance.
- Please place the product in a position that electric cables cannot be affected by the operations on the product.
- Follow all warnings and instructions marked on the product.
- Follow the on screen instructions for operating the related features.
- To prevent the risk of fire or electric shock, please do not overuse the plugs and extension cords. Please do not open the lid of the monitor to service yourself. If the required service needs are not met by an authorized service, dangerous voltage and other risks may occur.
- If you will not use the product for a long period of time, unplug the power cord from the mains.
- Put the product on a well-ventilated place and prevent from bright light, overheat and damp.
- The product should be kept in 0 C° - 40 C°. Otherwise, the appliance may be damaged permanently.
- Plug the appliance to a grounded outlet. Always use the grounded power cord supplied with your product. Manufacturer is not responsible for any damage caused unearthed usage.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Do not stay in contact with the parts of the product that become hot for long periods of time. Doing so may result in low-temperature burns.
- The LCD panel used in this product is made of glass. Therefore, it can break when the product is dropped or applied with impact. Be careful not to be injured by broken glass pieces in case the LCD panel breaks.
- Usage of the monitor must not be accompanied by fatal risks or dangers that, could lead directly to death, personal injury, severe physical damage or other loss, including nuclear reaction control in nuclear facility, medical life support system, and missile launch control in a weapon system.
- Do not expose the product to direct sunlight or do not place open flames such as lit candles on the top of or near the product.
- Do not place any heat sources such as electric heaters, radiators, etc. near the product.
- In order to prevent a potential electrical shock, in extreme weather (storms, lightning) disconnect the product from the mains.
- Do not touch the controls other than those described in the operating instructions. Improper adjustment of controls not described in the instructions can cause

damage, which often requires extensive adjustment work by a qualified technician.

- Do not shake the product. Ensure that it stays in a balanced stance on its position.
- Do not throw or drop any object on your product.
- Do not interfere on your products screen or any other surface with a sharp object.
- Do not keep your product in a humid environment.
- Do not keep your product in an extremely cold environment.
- Do not keep your product in an extremely hot environment.
- Do not place the product on the floor and inclined surfaces.
- To avoid danger of suffocation, keep plastic bags out of the reach of the babies, children and domestic animals.

### **Vent holes of the product**

The vent holes are designed to provide the product to work constantly and prevent it from overheating. Do not block these openings in anyway. For the same reason, please do not place your product on beds, sofas, carpets and similar surfaces.

Never insert an object into the product through vents or openings. High voltage flows in the product, and inserting any objects in the vents or openings of the product may cause electric shock, short circuit of the internal parts and/or fire. For the same reason, do not spill water or liquid on the product.

### **Repair**

Unless a basic implementation on the product is specified by the producers' technical department on a document, do not repair your product by yourself. Otherwise, your guarantee may get suspended and you may risk your health or your product. In case of need, consult your authorized service.

- When the cable is worn off or harmed.
- If the product has been dropped or the cabinet has been damaged.
- If the performance of the product is changed or the appliance needs to be repaired.
- When a liquid was spilled on the product or when objects have fallen into the product.
- When the product has been exposed to rain or water.
- When the product does not operate properly as described in the operating instructions.

### **Replacement parts**

In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts.

Use of unauthorized parts can result in fire, electric shock and/or other danger.

### **Safety checks**

Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.

### **Wall mounting**

When mounting the product on a wall, be sure to install the product according to the method recommended by the manufacturer.

- Read the instructions before mounting the product on the wall.
- The wall mount kit is optional. You can obtain from your local dealer, if not supplied with the product.
- Do not install the product on a ceiling or on an inclined wall.
- Use the specified wall mounting screws and other accessories.
- Tighten the wall mounting screws firmly to prevent the product from falling. Do not over-tighten the screws.

### **Power Cord**


- The power cord is used to disconnect the product from the mains and therefore it must remain readily operable. If the product is not disconnected electrically from the mains, the device will still draw power for all situations even if the product is in standby mode or switched off.
- Use only the power cord supplied with the monitor.
- Do not damage the power cord nor place heavy objects on it, stretch it, over bend it or step on it. Also, do not add extension cords. Damage to the cord may result in fire or electric shock.
- When unplugging the appliance, always pull directly on the plug. Do not pull from the cable when unplugging the appliance.
- Do not use the power cord with a power tap. Adding an extension cord may lead to fire as a result of overheating.
- Do not remove or insert the power plug with wet hands. Doing so could result in electric shock.
- Unplug the power cord if it is not used for a long time.
- Do not attempt to repair the power cord if it is broken or malfunctioning. When damaged it must be replaced, this should only be done by qualified personnel.

### **Especially for child safety**

- Don't allow children to climb on or play with the monitor.
- Don't place the monitor above furniture that can easily be used as steps.

- Remember that children can become excited while watching a program, especially on a "larger than life" monitor. Care should be taken to place or install the monitor where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the monitor so that they cannot be pulled or grabbed by curious children.

## Connections

 Be sure to turn off the main power switch and disconnect the plug from the power outlet before connecting/disconnecting cables. Also, read the manual of the equipment to be connected.

Be careful not to confuse the input terminal with the output terminal when connecting cables. Accidentally reversing cables connected to the input and output terminals may cause malfunctions and other problems.

In the case of USB fault condition, maximum current is below 5A.

## Positioning

If a monitor is positioned in an unstable or inclined location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple pre-cautions such as:

- Using fixing devices like wall mount brackets recommended or supplied by the manufacturer.
- Educating children about the dangers of climbing on furniture to reach the monitor or its controls. If your existing product is being retained and relocated, the same considerations as above should be applied

## Transport and Shipping


- Your device must be kept in its original package to protect from damage to its accessories during transport and shipping.
- Keep the product in normal position during transport.
- Do not drop the device during transport and protect it against impacts.
- Damages and faults that occur during transport after the delivery of the appliance to the customer are not included in the warranty cover.
- Product transportation, installation, repair and servicing must be done by qualified technical service personnel.

## Intended Use


- This product is intended to be used in public places such as schools, offices, theatres, places of worship.
- Product is only suitable for connecting commercial mains socket outlets. Do not connect product industrial socket outlets.

## Foreseeable misuse and incorrect use

- For apparatus intended to be used in vehicles, ships or aircraft or at altitudes exceeding 5000m above sea level, for outdoor use or in general for the application other than mentioned in user manual additional requirements may be necessary.



### CAUTION



Do not leave a static image displayed for prolonged period of time. If a static image is displayed continuously for a long period of time, that image may cause image sticking on the display. This condition is not permanent, but may require a considerable amount of operational display time to dissipate, depending upon the degree of image stick. 120 minutes of continuous motion display will eliminate most image sticking effects at normal room temperature (not lower than 10 C).

As the nature of the TFT technology, you may see some amount of bright, dark, red, green and blue dots and sparkings on the screen, those do not affect the performance of the computer and are not accepted as a defect.

## Warning

This is a class A. In a domestic environment this may cause radio interference in which case the user may be required to take adequate measures.

## BATTERY SAFETY GUIDELINES

Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused resulting in leakage or, in extreme cases, fire or explosion.

Here are some simple guidelines to safe battery use designed to eliminate any such problems.

- Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion.
- Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion.
- Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.

- Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.
- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.
- Never dispose of batteries in fire or with hazardous or flammable materials as this can cause them to explode. Please recycle dead batteries; do not put with the normal household waste.
- Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.
- Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.
- Do not ingest the battery, Chemical Burn Hazard.
- This product or the accessories supplied with the product may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.
- Keep new and used batteries away from children.
- Make sure battery compartments are secure. If the battery compartment does not close securely, stop using the product and keep it away from children.
- Seek immediate medical attention if you believe batteries might have been swallowed or placed inside any part of the body.
- If leaked battery fluid gets on your skin or clothing, rinse immediately and thoroughly. If it gets into your eye, bathe your eye well rather than rubbing and seek medical treatment immediately. Leaked battery fluid that gets into your eye or your clothing may cause a skin irritation or damage your eye.

## CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

## Markings on the Product

The following symbols are used **on the product** as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.



**Class II Equipment:** This appliance is designed in such a way that it does not require a safety connection to electrical earth.



**Class II Equipment With Functional Earthing:** This appliance is designed in such a way that it does not require a safety connection to electrical earth, the earth connection is used for functional purposes.



**Protective Earth Connection:** The marked terminal is intended for connection of the protective earthing conductor associated with the supply wiring.



**Hazardous Live Terminal:** The marked terminal(s) is/are hazardous live under normal operating conditions.



**Caution, See Operating Instructions:** The marked area(s) contain(s) user replaceable coin or button cell batteries.


*Any issues which are caused by customer mis-adjustment of any software including the operating system are not covered by the warranty.*

*Depending on the model you buy, the actual appearance of the product may differ from the images used in this manual.*

## General View


Please note that connection ports and other features shown here may vary depending on the Display model.

### Front Side

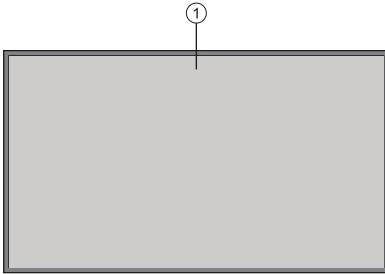

1. LCD Panel


### Rear Side (A)

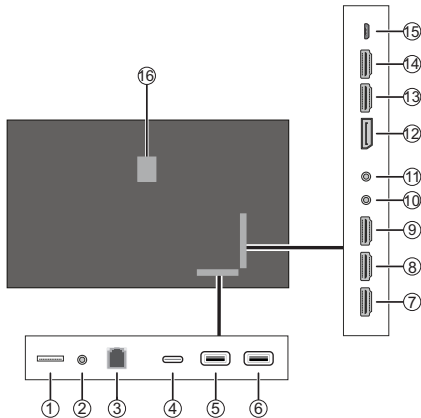

1. Micro SD
2. RS232 (3,5 mm)
3. Ethernet
4. USB Type-C (\*)
5. USB (3.0) (\*)
6. USB (2.0) (\*)
7. HDMI2 In
8. HDMI3 In
9. HDMI4 In
10. IR Input
11. Headphone/Line Out
12. DP In
13. HDMI1 In
14. HDMI Out
15. Micro USB (for touch only)
16. Internal USB Compartment

(\*) Supported file formats are listed in the **Supported Media Formats from USB** section.

## Rear Side (B)

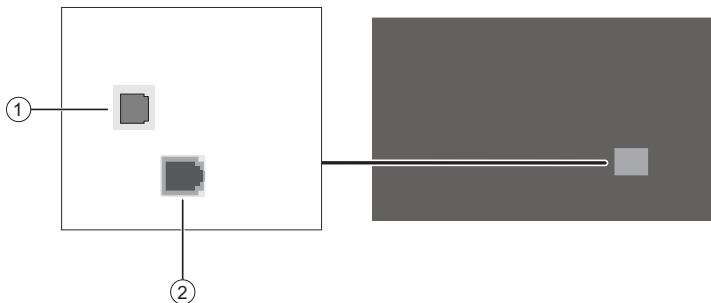

1. SPDIF Optical Out
2. RJ12 (service use only)

## Control Buttons on the Display



**Up:** Move the focus up (in Display menu)

**Down:** Move the focus down (in Display menu)

**Left:** Volume + / Move the focus right (in Display menu)


**Right:** Volume - / Move the focus left (in Display menu)

**In:** Turn On / Quick Standby / Standby (Press in and hold)

## Connecting the external IR Receiver

Before plugging the Display into the mains supply, connect the supplied IR receiver (depends on the model) to the IR input on the Display. Place the IR receiver in sight of your own remote control. Simply operate your remote control whilst pointed at the IR receiver and it will relay the control signal to your Display.

In case your Display has touch screen feature and if the IR receiver is going to be placed on the Display it shouldn't be placed facing the inside of the screen, otherwise the signals of the touch screen and the remote may interfere with each other. To improve the performance of your remote control place the IR receiver as shown in the drawing below.

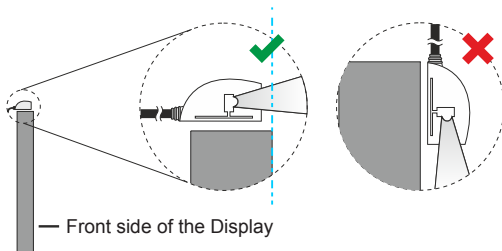

Depending on the model, your Display may have a built-in IR receiver on its cabinet. This IR receiver will not function if the external IR receiver is connected to the Display. Disconnect the external IR receiver if you want to use the built-in IR receiver again.

## Turning the Display On/Off


### Connect power

**IMPORTANT: The Display is designed to operate on 110-240V AC, 50/60 Hz socket.**

After unpacking, allow the Display to reach the ambient room temperature before you connect it to the mains. Plug the power cord into the mains socket outlet.

### For models with detachable power cord

Plug one end (female connector - C13) of the supplied detachable power cord into the power cord inlet (AC IN) on the rear side of the TV. Then plug the other end of the power cord into the mains socket outlet.

Turn on the power switch on the Display - position "1" (  ). The Display will switch into standby mode and the power LED will light up.

### To switch on the Display

If the Display is in standby mode or quick standby mode, the power LED lights up. To switch on the Display either press the **Standby** button on the remote control or press the centre of the joystick in. The Display will then switch on.

### To switch the Display into standby mode

In order to switch the Display into standby mode press and hold the **Standby** button on the remote control or press the centre of the joystick in and hold it down for a few seconds. **Power off** dialogue will appear on the screen. Highlight **OK** and press the **OK** button. The Display will switch into standby mode.

### To switch the Display into quick standby mode

In order to switch the Display into quick standby mode either press the **Standby** button on the remote control or press the centre of the joystick in. Press the button again to go back to operating mode.


**Note:** If the **Power Mode** option (to be found in the **Display Settings > Signage Settings > Power Up Settings** menu) is enabled (**Reactive mode**), the Display will switch into standby mode when the **Standby** button is pressed.

**Note:** Main menu OSD cannot be displayed via joystick.



## To switch off the Display

Turn off the power switch on the Display - position "2" (1 2). The Display will switch off. To power down the Display completely, unplug the power cord from the mains socket.

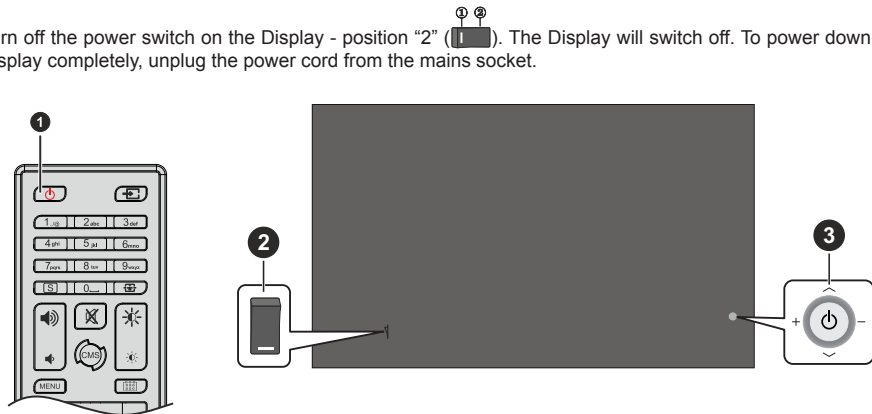

1. Standby Button
2. Power Switch (\*)
3. Joystick

(\*) The location of the power switch may differ depending on the model

Power LED Status	Status of the Display
Not lit	Power on (operating mode)
Lit	Power off (standby mode, quick standby mode)
Flashing (slow)	Turning on or off
Flashing (fast)	Software update

## Infrared Overlay Touch Screen

Infrared Overlay Touch Screen adds touch screen feature to your Display. The Touch Screen could be connected to the internal USB input of the Display internally or externally via the USB connection cable of the Touch Screen itself. If you switch the Display's source to the embedded OPS (if available), touch screen feature can be used with the OPS. It can also be used with external source devices. In this case the external source device should be connected to the Display via a Micro USB to USB (type-A) cable or via the USB cable of the Touch Screen itself depending on the model. Connect the Micro USB end of the Micro USB to USB (type-A) cable to the Micro USB port (\*) of the Display and the USB Type-A end to the external source device or connect the USB cable of the Touch Screen to the external source device as shown in the example connections below. Touch screen will become functional after a short period of time. The Touch Screen can also be used with the Internet Browser (if available) which can be launched from the Displays menu.


The Touch Screen is HID compliant. Windows, Linux, Mac and Android operating systems support HID. But in some cases a driver/patch may be required in order to use the touch screen with an external source device. In this case, the required driver/patch should be installed onto the external source device. Otherwise the Touch Screen may not work properly. Refer to the user manual of the source device for further information.

Touch screen controls the currently displayed image on the screen of the Display. If an embedded OPS is being used the touch screen controls the embedded OPS. If an external source device is connected via HDMI, DP (\*) or USB Type-C (\*) and the source is selected accordingly, then the connected device will be controlled.

(\*) Availability depends on the model


### Example Connection 1 (External PC)

Touch Screen is internally connected to the internal USB input of the Display.

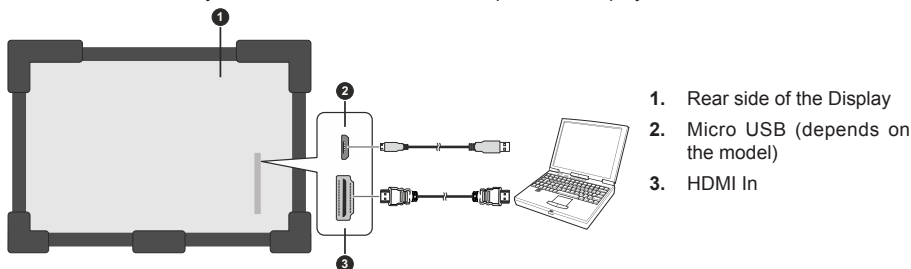

### Example Connection 2 (External PC)

Touch Screen is not externally connected to the internal USB input of the Display.

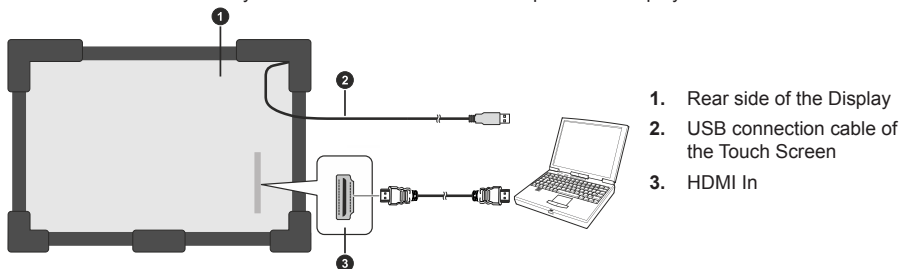


In the undermentioned circumstances the coordinates of the Touch Screen and Display's screen may need to be accurately matched by calibration.

- After the first time you have installed the touch screen driver software or patch.
- If inconsistency is occurred between the mouse and your finger action.
- After changing the Touch Screen or Display.
- If the resolution of the Display is changed.

**Note:** If any driver/patch is missing or you require technical support, please contact your retailer.

# Remote Control

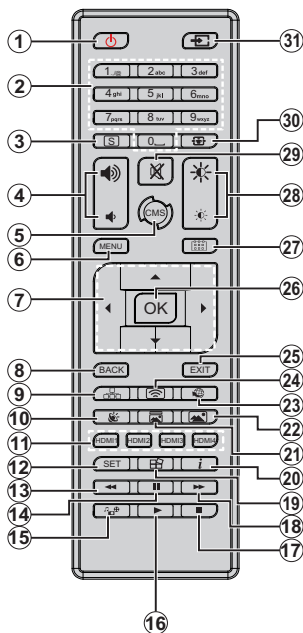

1. **Standby:** Switches On / Off the Display
2. **Numeric buttons:** Enters a number or a letter in the text box on the screen
3. **Signage:** Displays Signage Settings menu
4. **Volume +/-:** Increases or decreases the volume
5. **CMS:** Opens the predefined **Auto Launch (\*)** preference  
*(\*) This setting can be found in the **Display Settings > Signage Settings > Power Up Settings** menu. If it is set to **Disabled**, this button will have no function*
6. **Menu:** Opens the **Display Settings** menu
7. **Directional buttons:** Helps navigate menus, content, etc.
8. **Back/Return:** Returns to previous screen
9. **Network:** Displays **Network/Internet Settings** menu
10. **Sound:** Displays **Sound** menu
11. **HDMI Buttons:** Switches to the selected HDMI input source
12. **SET:** Saves the changes made in some of the settings, such as in the **Scheduler Settings** menu
13. **Rapid reverse:** Moves frames backwards in media such as movies
14. **Pause:** Pauses the media being played
15. **Media Player:** Launches the media player application
16. **Play:** Starts to play selected media
17. **Stop:** Stops the media being played
18. **Rapid advance:** Moves frames forward in media such as movies
19. **Video Wall:** Displays Video Wall Settings menu
20. **Info:** Displays information about on-screen content
21. **Picture Mode:** Cycles between picture modes
22. **Picture:** Displays **Picture** menu
23. **Internet:** Launches the open browser application
24. **Wireless Display:** Opens the wireless display connection screen (depends on the model)
25. **Exit:** Closes and exits from displayed menus or returns to previous screen
26. **OK:** Confirms user selections
27. **Scheduler:** Displays Scheduler Settings menu
28. **Brightness +/-:** Increases or decreases the brightness of the screen
29. **Mute:** Completely turns off the volume of the Display
30. **Picture Zoom:** Changes the aspect ratio of the screen
31. **Source:** Shows all available content sources

## Inserting the Batteries into the Remote

Remove the screw that secures the battery compartment cover on the back side of the remote control first. Insert two 1.5V - size **AAA** batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type. Place the cover back on. Then secure the cover again with the screw.

## Standby Button

Press and hold the **Standby** button on the remote control. **Power off** dialogue will appear on the screen. Highlight **OK** and press the **OK** button. The Display will switch into standby mode. Press briefly and release to switch the Display into quick standby mode or to switch on the Display when in quick standby or standby mode.

## General Use

Use the remote control when navigating through the menus and performing initial setup process.

### Operation with the Remote Control

Press the **Back/Return** or **Exit** button to display or return to the Home Screen. You can navigate through the elements situated in the centre of the Home Screen using the remote control buttons. Press the Right directional button first to start navigating on the Home Screen with the remote. Press the **Menu** button to display the **Display Settings** menu. Use the directional buttons to move the focus, proceed, adjust some settings and press **OK** to make selections in order to make changes, set your preferences, enter a sub-menu, launch an application, etc. Press the **Back/Return** or **Exit** button to return to the previous menu screen or step, close a menu or exit an application, etc.

### Input Selection

Once you have connected external systems to your Display, you can switch to different input sources. Press the **Source** button on your remote control. Use the directional buttons to highlight a source option and press the **OK** button to switch to that source. You can also use the dedicated HDMI buttons on your remote (depends on the model) to switch directly to the selected HDMI input.

### Adjusting the Volume and Brightness

You can adjust the volume by using the **Volume +/-** buttons and the brightness by using the **Brightness +/-** buttons on the remote.

*Note: Adjusting the brightness will not affect the picture on the launcher menu.*

You can also adjust the brightness using the **Brightness** option in the **Display Settings > Picture** menu. Press the **Menu** button on the remote to display the **Display Settings** menu.

## Initial Setup

When turned on for the first time, initial setup should be performed. Follow the on-screen instructions to setup your Display. The installation wizard will guide you through the setup process. Use the directional buttons and the **OK** button on the remote to select, set, confirm and proceed. You can use the **Back** button to go back to the previous steps and change your selections.

### 1. Language

The language selection options will be listed on the screen. Select the desired language from the list and press **OK** to continue.

### 2. Country

In the next step select your country from the list and press **OK** to continue.

### 3. Login

You will be asked to define a PIN at this point. Enter a PIN twice for confirmation using the virtual keyboard and then highlight **Continue** and press **OK**. You have to enter this PIN if you are asked to enter a PIN for any menu operation later. To skip this step highlight **Skip PIN** and press **OK**.

### 4. Signage Settings

The **Signage Settings** menu will be displayed next. The **Set ID**, **OSD Orientation**, and **NTP server** options can be configured using this menu. The **Model name**, **Serial number**, and **Software version** options are for information only. You can save the model information data of the Display to a connected USB storage device using the **Save model information** option. You can also copy database files from a connected USB storage device to the Display using the **Clone from USB** option. Refer to the **Signage Settings** section for more information on the options of this menu. After the settings are completed, highlight **Next** and press **OK** to continue.

### 5. Auto Launch

In this step you can set your Auto Launch preference for the Display. **Disabled**, **CMS**, **Open Browser**, **Vsign Lite**, **Select Source**, and **Select Application** options will be available. Set to **Disabled** if you don't want to use this functionality. In this case, the Display will open with the Home Screen. For the **Select Source** and **Select Application** options you will have to set the available source or application of your choice. You can change your preference any time later using the **Auto Launch** option in the **Display Settings > Signage Settings > Power Up Settings** menu.

### 6. Display Operation Mode

The **Display Operation Mode** selection screen will be displayed next. For normal operation set the **Power Mode** to **Reactive**. Set to **Eco** for an energy-efficient operation. In this mode your Display's settings will be configured to reduce the energy consumption. Note that, in **Eco** mode the UART/LAN Commands will not work when the Display is in standby mode. Highlight **Next** and press **OK** to continue.

When the initial setup is completed Home Screen will be displayed. You can repeat the initial setup process and reset the Display's settings to the factory defaults anytime using the **First time installation** option in the **Display Settings > Signage Settings** menu. You can access the **Display Settings** menu by pressing the **Menu** button on the remote.

*Note: You will be asked to enter the PIN to perform initial setup. If you didn't define a PIN during the initial setup, you can use the default PIN. Default PIN is set to 0000.*

## Home Screen

After the initial setup, the Display will open with the Home Screen. You can go to the **Display Settings > Signage Settings > Power Up Settings** menu to change the **Auto Launch** setting. If it is set to **Disabled**, the Display will always open with the Home Screen. Press the **Back/Return** or **Exit** button to display or return to the Home Screen.

Following options will be available on the Home Screen:

- **HTML5 CMS Launcher:** Opens the predefined Start URL. You can check if the Start URL have the desired link from the **Display Settings > Signage Settings > Link Options** menu. Refer to the **Changing the Start and Settings URL's** section for more information
- **Media Player:** Launches the media player application
- **Signage Settings:** Displays the **Signage Settings** menu
- **Applications:** Displays all applications installed on the Display

## Display Settings Menu Content

You can configure the settings of your Display using the **Display Settings** menu. In order to access this menu, press the **Menu** button on the remote. Available options will be listed.

Note that some options in the **Display Settings** menu may not be available depending on the model of your Display and its features.

### Picture

**Picture Mode:** Set the picture mode to suit your preference or requirements. Picture mode can be set to one of these options: **Game, Sports, Signage, Natural, and Text**.

Some of the picture settings will be adjusted according to the selected picture mode.

**Energy Saving:** Set your preference for energy saving. If set to **Eco** the Display will adjust the energy consumption accordingly. Set to **Off** to turn this setting off. Some other picture settings may not be changed if this option is set to **Eco**.

When the Display is not in use, you can switch off or disconnect the Display from the mains plug to reduce or cut the energy consumption.

**Contrast:** Adjust the contrast value of the screen.

**Brightness:** Adjust the brightness value of the screen.

**Sharpness:** Adjust the sharpness value for the objects displayed on the screen.

**Colour:** Adjust the colour saturation value of the screen.

**Backlight:** Adjust the backlight level of the screen manually. This item will not be available if the **Energy Saving** option is set to **Eco**.

**Picture Zoom:** Set the aspect ratio of the screen. To make the image fit the screen exactly, you can select one of the predefined options according to your preference.

### Advanced Settings

**Dynamic Contrast:** Set your preference for the dynamic contrast ratio setting. **High, Medium, Low,** and **Off** options will be available.

**Microdimming:** Set your micro dimming preference. **High, Medium, Low,** and **Off** options will be available. While this feature is active, it will enhance contrast locally for each defined zone.

**Colour Temperature:** Set your colour temperature preference. **Normal (9300K), Warm, Cold,** and **User** options will be available.

**Gamma Slider:** Adjust the light and dark balance manually.

**Noise Reduction:** Set your preference for noise reducing functionality. **High, Medium, Low,** and **Off** options will be available.

**Colour Shift:** Adjust the colour tone manually.

**Film Mode:** It is the function for 3:2 or 2:2 cadence detection for 24 fps film content and improves the side effects (like interlacing effect or judder) which are caused by these pull down methods. Set your Film Mode preference as **Auto** or turn it off by setting to **Off**.

**HDMI RGB Range:** This setting should be adjusted according to input RGB signal range on HDMI source. It can be limited range (16-235) or full range (0-255). Set your HDMI RGB range preference. **Auto, Full,** and **Limit** options will be available.

**Reset:** Reset the video settings to factory default settings.

*Note: Adjusting some of the settings may not affect the picture on the launcher menu.*

### Sound

**Speakers:** To hear the Display audio from the connected compatible audio device set to **External audio system**. Set to **TV Speakers** to use the speakers of your Display for sound output.

**Dolby audio processing:** With Dolby Audio Processing, you can improve the sound quality of your Display. Press **OK** to see the options and set.

**Sound mode:** Highlight the **Sound mode** option and press **OK** to see the preset sound modes. **Smart, Music, Movie,** and **News** options will be

available. Highlight the option you prefer and press **OK** to set.

**Balance:** Adjust the left and right volume balance for speakers and headphones.

**Digital Output:** Set the digital sound output preference. **PCM, Bypass,** and **Auto** options will be available. Highlight the option you prefer and press **OK** to set.

**AVL:** With this option, you can set the Display to automatically level out sudden volume differences. Typically at the beginning of adverts or when you are switching sources. Turn this option on/off by pressing **OK**.

**HDMI/ARC latency:** Adjust the delay value for HDMI/ARC.

**Audio Output Latency:** Adjust the delay value for SPDIF.

**Reset:** Reset the sound settings to factory default settings.

## Network & Internet

You can configure your Display's network settings using the options of this menu.

**Wi-Fi:** Turn the wireless LAN (WLAN) function on and off. Highlight and press **OK** to turn this function on and off.

### Available networks

When the WLAN function is turned on, a few available wireless networks will be listed. Highlight **See all** and press **OK** to see all networks. Select one and press **OK** to connect. You may be asked to enter a password to connect to the selected network, in case the network is password protected.

### Other Options

**Add new network:** Add networks with hidden SSID's (network name). You can use this option in order to connect to the hidden networks by entering their names manually. This item will not be available if the **Wi-Fi** option is not turned on.

**Networked Standby Mode:** This is a standard that allows a device to be turned on or woken up by a network message when it is in standby mode. Highlight and press **OK** to turn this function on and off. Refer to **Networked Standby Mode** section for more information.

### Ethernet

Under the **Ethernet** caption, you can see the LAN status (as **Connected - Not connected**) and also MAC/IP addresses if connected. You can also set a proxy server and change the IP settings using the related options.

**Connected/Not connected:** Displays the status of the connection (via Ethernet), IP and MAC addresses.

**Proxy settings:** Set a HTTP proxy for browser manually. This proxy may not be used by other apps.

**IP settings:** Configure your Display's IP settings.

## Signage Settings

### Device Info

Display device information menu options.

**Set ID:** Sets the device ID. You can set a number using the virtual keyboard in order to identify your Display.

**Software Version:** Displays current software version. Press **OK** to open the update centre. In addition to the current software version, the last update date information can be found here. The **CHECK UPDATE** option will be highlighted. Press **OK** to start a manual search for a software update. To do this, your Display should be connected to the Internet. If any update is found, you can download and install the new software using the related options. Follow the on-screen instructions to complete the process.

**Serial Number:** Displays serial number of the Display. (Cannot be changed by the user)

**Model Name:** Displays model name of the Display. (Cannot be changed by the user)

**Save Model Information:** Copies the model information data of the Display to a connected USB device.

**Display Life Time:** Displays the lifetime of the Display in hours.

### Controls

**OSD Orientation:** Sets the OSD (On Screen Display) rotation of your Display. **Landscape, Portrait1, Portrait2,** and **Auto** options are available.

When set to **Auto**, the Display will use the integrated gyro sensor to detect its own rotation automatically and change the OSD orientation accordingly.

**Pixel shift:** Enables or disables pixel shifting. This option can be used to avoid image retention (after image effects) that can occur when displaying fixed patterns or still images for long periods of time. If enabled, the picture and OSD (On-Screen Display) will be shifted at specified time intervals.

**No Signal:** Sets the behavior preference of the Display, when no signal is detected from the currently set input source. **Failover** and **Input Search** options are available.

If **Failover** is selected the Display checks the connected USB device for available files to play. If no playable files are available or there is no USB device connected to the Display, the No Signal Image will be displayed. If there isn't any No Signal Image available,

No Signal OSD will be displayed on the screen. The setting of the **USB Auto Play** option in the **Display Settings > System Settings > More** menu is not important, in Failover mode it will function anyway.

If **Input Search** is selected, available input sources will be listed. Highlight the options you want and press **OK** to select. The Display will search all selected input sources consecutively to find signal. If no signal is detected from other available sources, the Display will turn off automatically after completing a cycle.

#### How to install No Signal Image

Install the file you want to use onto the root directory of any USB storage device and name it as "NoSignalImage.png". Connect the USB storage device to the Display. Highlight the **USB Operations** option in the **Display Settings>Signage Settings>USB** menu and press **OK**.

**No Signal Delay:** Sets a delay value to the 'No Signal' preferences when the Display is in No Signal state. After the set delay time has expired 'No Signal' preferences will be applied.

**No Signal Power Off:** When enabled the Display will turn itself off after a specified period of time (defined in the **No Signal Timer** option), if no signal is received from the selected source.

This feature will only work if all of the following circumstances occur:

- **No Signal** option is set to **Failover**.
- USB device is not connected to the Display / USB device is connected but there are no playable files installed on the USB device.

**No Signal Timer:** You can define a shut-off timer for the Display using this option. When the Display is in No Signal state and No Signal OSD is displayed on the screen, it will go into standby mode after the time set here has expired.

**Panel Lock:** Set to **On** to prohibit the use of the button/s on the Display.

**RCU Inhibit:** Set to **On** to inhibit the use of the remote. Remote control will function in standby mode independently from the setting of this option.

To turn this option off and be able to use the remote again, press the **MENU/M-1-9-7-3-Back/Return** buttons on the remote consecutively. The **Signage Settings** menu will appear. Enter the **Controls** menu and set this option to **Off**.

**UART0:** Select ASCII/HEX protocol for UART 0. Default value is ASCII. There is no need to restart the Display after selection in order to work with the protocols correctly. If the selection is changed, the latest selected protocol will be preserved and started when the Display is booted up.

Note that ASCII/HEX selection is not working while debug logs are enabled. If it is wrongly changed to HEX

while debug logs are enabled, revert the selection to ASCII and reboot the Display in order to correct the debug logs and the ASCII protocol behaviour.

Also note that HEX protocol will work with the baud rate value 19200 for UART 0.

**UART1:** Select ASCII/HEX protocol for UART 1. Default value is HEX. There is no need to restart the Display after selection in order to work with the protocols correctly. If the selection is changed, the latest selected protocol will be preserved and started when the Display is booted up.

Note that ASCII/HEX selection is always working as expected. It does not matter if the debug logs are enabled or not.

Also note that HEX protocol will work with the baud rate value 9600 for UART1

**Wifi and BT (depends on the model):** Sets the source option for these functions. **Display**, **OPS**, and **Auto** options will be available.

**Microphone and Front USB (depends on the model):** Set your source preference for microphone and front USB input/s. **Display**, **OPS**, and **Auto** options are available. Selected option determines whether the microphone and front USB inputs are active.

Auto - active for current source

Display - active for sources other than OPS

OPS - active for OPS source

*Note: Microphone and front USB may not be available depending on the model of your Display.*

**Menu Lock:** You can block the usage of the menu button on the remote by setting this item as **All menus**. When you press the **Menu** or **Signage** button, or highlight the **Signage Settings** on the Home Screen and press **OK**, you will be asked to enter the PIN that you have defined during the initial setup process. If you didn't defined a PIN during the initial setup, you can use the default PIN. Default PIN is set to **0000**. Set to **Off** to disable this function.

**Auto Source Switch:** If this option is enabled the Display will switch to the currently active HDMI source automatically when a device is connected to the Display through the HDMI1 or HDMI2 input socket. Set to **Enabled** to enable this feature.

When the HDMI source is removed the Display will switch to other active HDMI source. If there isn't any other device connected to the Display and the HDMI Wake UP option for the related HDMI source is enabled the Display will switch into the standby mode.

There is also a 3-second restriction for the successive connected HDMI sources. This means, second HDMI device must be plugged in 3 seconds after the first HDMI device is plugged in.

*Note: This feature applies for HDMI1 and HDMI2 input sockets only. Refer to the **General View** section to see the HDMI inputs.*



**Bluetooth:** Switches on or off the Bluetooth functionality. Set to **Enabled** to enable this feature.

## Power Up Settings

**Power Up Mode:** Configures the power up mode preference. **Always On**, **Standby**, and **Last State** options are available.

**Power Mode:** If this feature is enabled the Display can be turned on again with the RS232 and LAN commands if it is turned off through it. Press **OK** to enable or disable the feature.

Enabled - Reactive mode

Disabled - Eco mode

**Power On Delay:** Sets a delay value at power on. This value can be set from 0 to 2000 ms in steps of 100 ms. The Display will turn on after the set delay time has expired.

**Auto Launch:** Configures the auto launch preference. **Disabled**, **CMS**, **Open Browser**, **Vsign Lite**, **Select Source**, and **Select Application** options are available.

**HDMI Wake Up Enabled:** If this option is enabled, the Display will turn on with the HDMI1 input source, when it is switched on. This feature works based on HDMI 5V signal. When this signal is active the Display wakes up and when the signal is inactive the Display shuts down. You can enable or disable this option by pressing **OK**. In order to use this feature in conjunction with the Auto Source Switch feature it is recommended to enable the **Auto Source Switch** option in the **Signage>Controls** menu.

If any Scheduler is set this option will be inactive and can not be set as **Enabled**.

*Note: This feature may not be available depending on the model of your Display.*

## USB

**Clone to USB:** Copies the database files from the Display to a connected USB device.

**Clone from USB:** Copies the database files from a connected USB device to the Display.

**USB Operations:** Highlight and press **OK** to perform USB operations.

**USB Information:** Press **OK** to open the **USB Information** menu screen. Current total space and free space information of the connected USB device will be displayed. You can also format the connected USB device as device storage using the **Format Disk** option in this menu (FAT32 format only) to extend the storage capacity of your Display. After doing this, that device will only be usable with the Display.

**IMPORTANT:** Formatting your USB storage device will erase ALL the data on it and its file system will be converted to FAT32.

**USB Option:** Set to **Off** to disable the USB ports on the Display. You can also set this option to **5V** to provide 5 volts power over USB. In this case it will still not be available to browse the USB content via the Media Player feature of the Display.

**USB resume play:** Press **OK** to enable or disable the feature. When enabled, the media player will be able to resume playing the most recently played file from the position where it was stopped last time. When disabled, the media player will start playing the file from the beginning.

*Note: The resume play function status is retained until the Display is turned off (standby mode) or the USB memory device is taken out.*

**Safely Remove:** You can use this option to remove the devices connected to the USB inputs of the Display safely. Highlight this option and press **OK**. Wait for the message to be displayed on the screen and then remove your device. Failure to do so, may cause problems when you connect your USB device to other devices and you might have to format your USB device.

## OPS Settings

Press **OK** to open the **OPS Settings** menu screen. This menu cannot be displayed if the OPS module is not plugged in.

**OPS Status:** Displays whether the OPS module is on or off. Allows the change of status via soft PSON signal (0.5s).

**OPS Power:** Highlight and press **OK** to turn the OPS module on or off.

**Power Down:** Turns the OPS off via hard PSON signal (5s).

**Boot Signal:** Enables or disables sending of a PSON signal. The Display checks the status signal of the OPS at bootup in order to turn it on by sending a PSON signal if it is off. Some OPS's send incorrect information on their status during the bootup of the Display, so they seem to be on even though they are off. For such non-standard OPS's, this option must be enabled. In this case, a PSON signal will be sent for the OPS regardless of the received status information at bootup.

**Recovery Mode:** When this option is enabled and OPS is on, if there is no video for 10 seconds it resets hotplug. If there is no video available after 30 seconds it reboots OPS.

**OPS Always On:** When this option is enabled, the **Power Mode** option in the **Display Settings > Signage Settings > Power Up Settings** menu will be forced to enabled (**Reactive mode**) and greyed out in the menu and OPS will not be set to standby.

## Scheduler Settings

Using the scheduler options you can set the Display to turn on automatically at defined time intervals



with the defined input source setting on the desired days of the week. Press **OK** to open the **Scheduler Settings** menu screen. You can set up to 4 different plans.

Highlight the desired plan option and press **OK** to set. Now you will be able to define a time for the Display to be turned on automatically. Highlight the related option and press the **OK** button, then use the directional and numeric buttons on the remote or the virtual remote to set a time. Highlight **OK** and press the **OK** button again when you are done.

Perform the same steps to set a time for the Display to turn off.

Next, select the week day/s for your plan to be activated. Highlight the desired day/s and press **OK** to check. Highlight and press **OK** a second time to uncheck a box. The plan will be active on the checked days of the week.

Then define a source for your plan. Highlight the related option and press the **OK** button, then set as desired using the Up/Down directional buttons and the **OK** button. If the **Last Source** option is selected, the input source will not be changed at the power-up. If the **USB** option is selected, the media files on the connected USB device will be automatically played back as explained in the **USB Auto Play Feature** section.

You can also set a backlight value for your plan. Highlight the backlight slider and set using the Left/Right directional buttons. Mind that, in case you set only the backlight slider, the display will not be turned on or off, only the backlight values will be changed at defined time interval. If the source option is set to **Last Source**, the backlight settings will be applied to all sources, otherwise the settings will be applied to the selected source only.

Highlight **Save** on the plan setting screen and press **OK** to save settings when complete.

### Link Options

Press **OK** to open the **Link Options** menu screen. Current **Start url** and **Settings url** links will be displayed. These items are for information only and not selectable. Refer to the **Changing the Start and Settings URL's** section for information on setting these links. The **Open browser initial page** and **NTP server** link preferences can be configured using the related options. Highlight the option you want to configure and press **OK**.

**Open browser initial page:** Sets the initial page link for the open browser.

**NTP server:** Sets the NTP server link.

**Start url:** Displays the Start URL link.

**Settings url:** Displays the Settings URL link.

### Volume Settings

**Volume Limit:** Sets the maximum value of the volume.

**Volume Limit (Headphone):** Sets the maximum value of the headphone volume.

**Startup Volume Enable:** Enables or disables the use of startup volume values which are set in the **Startup Volume Value** and **Startup Volume Value (Headphone)** menu items. If this option is disabled, these menu items will be unavailable to be set. Press **OK** to enable or disable the feature.

**Startup Volume Value:** Sets the startup value of the volume.

**Startup Volume Value (Headphone):** Sets the startup value of the headphone volume.

**Fixed Volume Enable:** Enables or disables the use of fixed volume value which is set in the **Fixed Volume Value** menu item. Press **OK** to enable or disable the feature.

**Fixed Volume Value:** Sets the value of the volume to be fixed.

**Headphone Direct Volume:** Enables or disables the control of the headphone volume through remote control. When this feature is enabled, volume control buttons will not change the Display's main sound. You can change the sound of the Display using the Left/Right directional buttons of the remote control. Press **OK** to enable or disable the feature.

### Reset to Default Values

**Reset:** Highlight this option and press the **OK** button on the remote to return the signage menu settings to factory defaults.

### Video Wall Settings

**Reset:** Resets the settings to factory defaults.

### First time installation

Highlight this option and press **OK** to repeat the initial setup process and reset the Display's settings to the factory defaults.

### System Settings

**Language:** Set your OSD menu language preference.

**Date & time:** Set the date and time options of your Display.

**Automatic date & time:** You can set your Display to automatically update the time and date data over the network. Turn this option off, if you want to manually set the date and time.

**Set date:** Set the date manually.

**Set time:** Set the time manually.

**Set time zone:** Set the time zone.

**Use 24-hour format:** Turn the 24-hour format on or off.

**Sources:** Enable or disable selected source options. There will be **Disabled**, **Enabled**, and **Enhanced** options available for HDMI sources, if your Display supports Ultra HD. The **Enabled** and **Enhanced** options are affecting the colour settings of the selected HDMI source. To be able to watch 4K images from an HDMI source related source setting should be set to **Enhanced** if the connected device is HDMI 2.0 compatible. Set to **Enabled** if the connected device is HDMI 1.4 compatible. Set accordingly or disable the related HDMI source by setting to **Disabled**.

**Note:** HDMI cables which are longer than 5 metres and which are not HDMI certified can cause display problems. We recommend using a certified Premium High-Speed HDMI Cable. Source device, connection cable quality and other HDMI equipments used may affect performance.

Please refer to → <https://www.hdmi.org/resource/cables/finding-the-right-cable>

## More

**Menu Timeout:** Set your idle timeout duration preference for the menus.

**Standby Mode Led:** Enable or disable the functionality of the standby mode LED. If set to **Off** the standby mode LED will not light up when the Display is in standby mode.

**Software Upgrade:** Ensure that your Display has the latest software. Press **OK** to see the current software version and last update time. The **CHECK UPDATE** option will be highlighted. You can start a manual search for an update by pressing **OK**. To do this, your Display should be connected to the Internet. If any update is found, you can download and install the new software using the related options. Follow the on-screen instructions to complete the process.

**Country:** The country that was selected during the initial setup process will be shown.

**Auto Display OFF:** Set your time preference for the Display to automatically go into standby mode when not being operated. This option can be set from 1 to 8 hours in steps of 1 hour. You can also disable this option by setting to **Off**.

**CEC:** Enable or disable the CEC functionality. Highlight the option of your choice and press **OK** to set.

**CEC Auto Power On:** This function allows the connected HDMI-CEC compatible device to turn on the Display and switch to its input source automatically. Highlight the option of your choice and press **OK** to set.

**USB Auto Play:** Using this option you can set your Display to start playing the media content installed on a removable device automatically. Refer to **USB Auto Play Feature** section for detailed information.

## Android Menu Content

You can also configure some of the settings of your Display via the hidden **Android Settings** menu. In order to access this menu, press the **Menu** button and then 3921 buttons on the remote consecutively. Available options will be listed.

Note that some options in the **Display Settings** menu may not be available depending on the model of your Display and its features.

## Network & Internet

You can configure your Display's network settings using the options of this menu. Refer to the **Display Settings Menu Content** section for more information.

## Apps

Using the options of this menu, you can manage the apps on your Display.

## Recently opened apps

You can display recently opened apps. Highlight **See all apps** and press **OK** to see all the apps installed on your Display. The amount of storage space that they needed will also be displayed. You can see the version of the app, open or force to stop the running of the app, uninstall a downloaded app, see the permissions and turn them on/off, turn on/off the notifications, clear the data and cache, etc. Highlight an app and press **OK** to see available options.

## Permissions

Manage the permissions and some other features of the apps.

**App permissions:** The apps will be sorted by permission type categories. You can enable/disable permissions for the apps from within these categories.

**Special app access:** Configure some app features and special permissions.

## Device Preferences

**About:** Check for system updates, change the device name, restart the Display and view system information such as network addresses, serial numbers, versions, etc. You can also view legal information here.

**Date & Time:** Set the date and time options of your Display. You can set your Display to automatically update the time and date data over the network. Set corresponding to your environment and preference. Disable by setting as **Off** if you want to manually change the date or time. Then set the date, time, time zone and hour format options.

**Language:** Set your language preference.

**Keyboard:** Select your keyboard type, configure remote controller input method preferences, and manage keyboard settings.

## Sound

**System Sounds:** System sound is the sound played when navigating or selecting an item on the Display screen. Highlight this option and press **OK** to turn this function on or off.

**Surround Sound:** Select your preference for the surround sound feature. Highlight **Select formats** and press **OK**. **Auto**, **None**, and **Manual** options will be available. Highlight the option you prefer and press **OK** to set.

**Storage:** View the total storage space status of the Display and connected devices if available. To see detailed information on the usage details highlight and press **OK**. There will also be options for ejecting and setting up the connected USB storage devices as device storage.

**Eject:** To keep your content safe, eject your USB storage device before you unplug it from your Display.

**Erase & format (Set up) as device storage:** You can use the connected USB storage device to extend the storage capacity of your Display. After doing this, that device will only be usable with the Display. Follow the on-screen instructions and read the information displayed on the screen before proceeding.

*Note: Formatting the connected storage device will erase all data installed on it. Back up the files that you want to keep before you proceed with formatting the device.*

**Erase & format (Set up) as removable storage:** If you did priorly format your USB storage device as device storage, it will only be usable with your Display. You can use this option to format it again in order to use it with other devices. Before proceeding with the formatting, you may consider backing up the data on your device to your Display's internal storage or to another USB storage device using the **Back up apps** option. Otherwise, some apps may not work properly after formatting. Follow the on-screen instructions and read the information displayed on the screen before proceeding.

*Note: Formatting the connected storage device will erase all data installed on it. Back up the files that you want to keep before you proceed with formatting the device.*

**Screen Saver:** Set the screensaver and sleep mode options for your Display. You can choose a screensaver, set wait time for the screensaver, set when the Display goes into sleep mode or start the screensaver mode.

**Location:** You can allow the use of the wireless connection to estimate the location, see the recent

location requests and allow or restrict the listed apps to use your location information.

**Security & restrictions:** Using the options of this menu;

- You can allow or restrict installation of apps from sources other than the Google Play Store.
- Set the TV to disallow or warn before installation of apps that may cause harm.

**Accessibility:** Configure **Captions**, **Text to speech**, **Accessibility shortcut** settings and/or turn **High contrast text** on/off. Some of the caption settings may not be applied.

**Restart:** A confirmation message will be displayed, select **Restart** to proceed with restarting. The Display will switch off/on first. Select **Cancel** to exit.

**Reset:** Reset all Display settings to the factory defaults. Highlight **Reset** and press **OK**. A confirmation message will be displayed, select **Reset** to proceed with resetting. The Display will switch off/on first and the initial setup will start. Select **Cancel** to exit.

## Installing Third Party Applications

Follow the below mentioned steps in order to install a third party application.

- Copy the file with the extension ".apk" onto a FAT formatted USB storage device
- Connect the USB storage device to one of the USB inputs on the Display.
- Launch the **AppInstaller** app from the **Applications** menu on the Home Screen. Highlight your connected USB storage device on the next dialogue and press **OK** to search the content for apk files. Highlight one of the found files and press **OK**. Your permission will be asked. Highlight **INSTALL** and press **OK** again to proceed.
- You can access the installed applications from the Applications menu on the Home Screen.

*Note: Third party applications support is limited. Some functions of the application or properly launch may be affected as not being coded according to required Android platform. Download processes via the open browser are not supported.*

## Connectivity


To configure wired and wireless settings you should access the **Display Settings > Network & Internet** menu. Press the **Menu** button on the remote to view the **Display Settings** menu.

### To Connect to a Wired Network

There is an Ethernet socket on the rear side of your Display. Connect your Display to your modem/router

via this Ethernet socket using an Ethernet cable. Refer to the **General View** section on the first pages of this manual to see the location of the socket.

The status of the Internet connection under the **Ethernet** caption in the **Network & Internet** menu will read 'Connected'. The MAC and IP addresses will also be displayed under this caption.

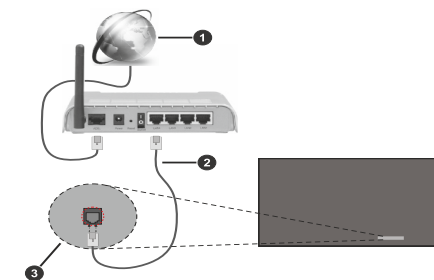



- 1 Broadband ISP connection
- 2 Ethernet (LAN) cable
- 3 Ethernet (LAN) input (on the rear side of the Display)

### To Connect to a Wireless Network

A wireless LAN modem/router is required to connect the Display to a wireless network. If the Display is connected to a wired network, unplug the Ethernet cable to allow wireless connection.

Highlight the **Wi-Fi** option in the **Network & Internet** menu and press **OK** to turn on the **WLAN**. Available networks will be listed. Select one and press **OK** to connect. You may be asked to enter a password to connect to the selected network, in case the network is password protected.

You can see the status of the connection under the name of your network. It will read 'Connected' if the connection is successful. Highlight your network under the **Available networks** caption in the **Network & Internet** menu and press **OK** to see the detailed information on the connection such as MAC and IP addresses. This way you can also access advanced settings for the wireless connection such as proxy and IP settings. You can also use the **Forget network** option here to delete the connected wireless network profile, so the Display will not connect to that network automatically if it is available when the **WLAN** option is turned on.

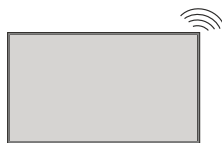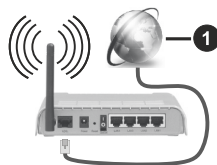

### 1 Broadband ISP connection

A network with hidden SSID (network name) cannot be detected by other devices. If you want to connect to a network with hidden network name, highlight the **Add new network** option under the **Other options** caption and press **OK**. To connect to the network, enter its name, select the type of security and then enter the password if it is password-protected. You can also make your network's name visible by changing the settings via the modem's software.

A Wireless-N router (IEEE 802.11a/b/g/n/ac) with simultaneous 2.4 and 5 GHz bands is designed to increase bandwidth. These are optimised for smoother and faster HD video streaming, file transfers and wireless gaming.

The frequency and channel differ depending on the area.

The transmission speed differs depending on the distance and number of obstructions between the transmission products, the configuration of these products, the radio wave conditions, the line traffic and the products that you use. The transmission may also be cut off or may get disconnected depending on the radio wave conditions, DECT phones or any other WLAN 11b appliances. The standard values of the transmission speed are the theoretical maximum values for the wireless standards. They are not the actual speeds of data transmission.

The location where the transmission is most effective differs depending on the usage environment.

The Wireless feature of the Display supports 802.11 a,b,g,n & ac type modems. It is highly recommended that you should use the IEEE 802.11n communication protocol in order to avoid any possible problems while watching videos.

You must change your modem's SSID when there are any other modems around with the same SSID. You can encounter connection problems otherwise. Use a wired connection if you experience problems with a wireless connection.

A stable connection speed is required to play back streaming content. Use an Ethernet connection if the wireless LAN speed is unstable.

**Note:** *Android system allows only one network connection at a time. If the Display is connected to the network both wirelessly and via Ethernet (wired), the Ethernet connection will take priority. Since if this is the case, a WLAN connection can not be established. Unplug the Ethernet cable to allow wireless connection.*

## Networked Standby Mode

Networked Standby Mode is a standard that allows a device to be turned on or woken up by a network message (magic packet). This message is sent to the device by a program executed on a remote device connected to the same local area network, such as a smartphone.

To enable this feature the **Networked Standby Mode** option in the **Network & Internet** menu and the **Power Mode** option in the **Display Settings>Signage Settings>Power Up Settings** menu should be enabled (**Power Mode - Reactive**). It is necessary that both the device, from which the network message will be sent to the Display, and the Display are connected to the same network. All devices must support magic packet on the system from Access Points to the device which sends the magic packet and the device which receives the magic packet to wake-up. You can use any Networked Standby Mode software available for the operating system of your device in order to send magic packets.

In order to use this feature the Display and the remote device should be connected at least once while the Display is on. If the Display is powered off, the connection should be re-established, the next time it is switched on. Otherwise this feature will be unavailable. This does not apply, when the Display is switched into the standby mode.

### How to control functionality

- Enable the **Networked Standby Mode** feature from within the **Network & Internet** menu
- Connect your Display and the remote device, which will send the magic packets to the Display, to the same network
- Get the MAC address of your Display which will be needed in order to send magic packets. Refer to **Connectivity** section for information on how to get the MAC address
- Switch the Display into standby mode
- Send magic packets to the MAC address of your Display by using mobile phones, Linux or Windows computers

Your Display should wake up after receiving magic packets.

## Wireless Display

Wireless Display is a standard for streaming video and sound content. This feature provides the ability to use your Display as wireless display device.

### Using with mobile devices

There are different standards which enable sharing of screens including graphical, video and audio content between your mobile device and Display.

Press the **Source** button on the remote and switch to **Wireless Display** source.

A screen appears stating that the Display is waiting for the connection and you can see your Display's device name at the bottom side of the screen.

Open the sharing application on your mobile device. These applications are named differently for each brand, refer to the instruction manual of your mobile device for detailed information.

Scan for devices. After you select your Display and connect, the screen of your device will be displayed on your Display.

**Note:** *This feature can be used only if the mobile device supports this feature. If you experience problems with the connection check if the operating system version you use supports this feature. There may be incompatibility problems with the operating system versions which are released after the production of this Display. Scanning and connecting processes differ according to the programme you use. The maximum supported resolution is 1920x1080. Image quality may be affected by neighbouring wireless networks and your internet connection speed.*

## APPS

You can access the applications installed on your Display from the **Applications** menu on the Home Screen. The Display will open with the Home Screen if the **Auto Launch** option (to be found in the **Display Settings > Signage Settings > Power Up Settings** menu) is set to **Disabled**. Press the **Back/Return** or **Exit** button to display or return to the Home Screen. Highlight **Applications** and press **OK**, then highlight an app and press **OK** to launch.

In order to open the **Start url** that is defined in the **Display Settings > Signage Settings > Link Options** menu highlight the **HTML5 CMS Launcher** option and press **OK**. Then highlight **Launcher** and press **OK** again.

### Notes:

*Possible application dependent problems may be caused by the content service provider.*

Third party internet services may change, be discontinued or restricted at any time.


## Internet Browser

To use the internet browser enter the **Applications** menu on the Home Screen first. Then launch the **Vewd Browser** application. EULA (End User Licence Agreement) confirmation dialogue will be displayed. You can read the entire text using the Up and Down directional buttons. Highlight **Accept** and press **OK** to confirm and proceed.

In the initial screen of the browser, the thumbnails of the predefined (if any) links to web sites available will be displayed as **Speed Dial** options along with the **Edit Speed Dial** and the **Add to Speed Dial** options.

You can press the **Internet** button on the remote to open the internet browser. If the **Open browser initial page** link in the **Display Settings > Signage Settings > Link Options** menu is defined, the browser will open on this page.

To navigate the web browser, use the directional buttons on the remote or a connected mouse. To see the browser options bar, move the cursor to the top of the page. **History**, **Tabs** and **Bookmarks** options and the browser bar which contains previous/next buttons, the refresh button, the address/search bar, the microphone (non-functional), the **Speed Dial** and the **Vewd** buttons are available.

To add a desired website to the **Speed Dial** list for quick access, move the cursor to the top of the page. The browser bar will appear. Highlight the **Speed Dial** -  button and press the **OK** button. Then select **Add to Speed Dial** option and press the **OK** button. Fill in the blanks for **Name** and **Address**, highlight **OK** and press the **OK** button to add. Whilst you are on the site you wish to add to the **Speed Dial** list, highlight the **Vewd** button and press the **OK** button. Then highlight the **Add to Speed Dial** option in the submenu and press the **OK** button again. **Name** and **Address** will be filled automatically according to the site you are visiting. Highlight **OK** and press the **OK** button to add.

You can also use the **Vewd** menu options to manage the browser. Highlight the **Vewd** button and press the **OK** button to see available page specific and general options.

There are various ways to search or visit websites using the web browser.

Enter the address of a website(URL) into the search/address bar and highlight the **Go** button on the virtual keyboard and press the **OK** button to visit the site.

Enter keyword/s into the search/address bar and highlight the **Go** button on the virtual keyboard and press the **OK** button to start a search for the related websites.

Highlight a Speed Dial thumbnail and press the **OK** button to visit the related website.

Your Display is compatible with USB keyboard/mice. Plug your device into the USB input of your Display for easier and quicker navigation.

Some web pages include flash content. These are not supported by the browser.

Your Display does not support any download processes from the internet via the browser.

All sites on the internet might not be supported. According to the site; content problems may occur. In some circumstances video contents might not be able to be played.

## Vsign Lite

Vsign Lite is a signage application runs without CMS and managed through the Display. The Display software is integrated with it.

### 1. Setup

#### 1.1. Application Specification

Requirements	
Display Platform	MB400VS
Firmware Version	v7.42 & higher versions
Language Options	English, Turkish
Hardware Requirements	USB

#### 1.2. How is it opened?

During the Display's initial setup process, the **Auto Launch** option should be set to **Vsign Lite**. Later, every time the Display restarts, the application will open. Additionally this setting can be changed using the **Auto Launch** option in the **Display Settings > Signage Settings > Power Up Settings** menu. You can also launch this application from within the **Applications** menu on the Home Screen.

### 2. Vsign Application Display

The Vsign Lite application consists of three main parts. These are **Player**, **Schedule** and **Template** sections. Moreover, there is the **Import/Export Settings** section for backup/export of application settings.

#### 2.1. Player

Using this screen, the content of the connected USB storage device can be viewed, erased, played, and transferred to another USB storage device. Various filtering and sorting operations can be done from the menu section above. In addition, the channels created in the section over time are played here.

##### 2.1.1. File Management

Pressing the **OK** button on any file opens the menu for file-related operations. The options described below can be selected and processed.



**Play:** If the selected file is playable, it plays, otherwise the text is dimmed.

**Select:** Selecting the file activates the multi-selection mode described in the next section.

**Send:** Sends the selected file to another storage device.

**Delete:** Deletes the selected file.

### 2.1.2. Multi-Selection Mode

Multiple selection mode is activated by pressing the **OK** button on the **Select** option in the file management menu. Then select the files you want with the **OK** button or cancel the selected ones. During this process, you can go to different folders and select the files there.

Options appear up when multi-selection mode is on. These operations can be done to the selected files as explained below.

**Select All:** Selects all files in the current folder.

**Clear All:** Clears all selected options.

**Play All:** Plays the selected files in order of selection. Appears as greyed out if the files are not playable.

**Send All:** Sends the selected files to the selected USB storage device.

**Cancel:** Closes the multi-selection mode.

## 2.2. Schedule

By using the Schedule screen, a channel can be created, programmes can be created within the channel, they can be viewed and edited. The channels number are limited to four.

In the menu, the channels are displayed on the screen in accordance with the time information on the top left and down. With navigation, it can be switched through programmes. Detailed information about the focused programme can be found on the right-hand panel.

### 2.2.1. Channel/Programme Addition

Navigate to an empty or occupied area and press the **OK** button. In the empty area, channel and programme addition screen, in the occupied area editing screen are opened. Images, videos and templates can be added to the channel as content.

-If the rightmost space (Add Channel) is selected, a new channel will be created and the screen will pop up to create our first programme.

-If an empty space is selected in a previously created channel, the new programme is added to the channel.

-If the occupied area is selected in a previously created channel, the selected programme will be edited.

#### 2.2.1.1. Channel/Programme Editing Screen Input Fields

**Add Content:** If the **OK** button is pressed on this field; the appropriate content is listed. The users can do multi-selection. You can then delete the content by

pressing the **OK** button.

**Start Time:** Starting time of the programme.

**Stop Time:** Stopping time of the programme.

**Channel Name:** The name of the channel in which the programme is included.

**Storage:** The storage device in which the channel is saved.

### 2.2.2. Supported Files

The application supports the formats listed below:

**video:** mp4, mpeg, avi, mov, webm, ts, mpg, m4a, mkv

**image:** jpg, jpeg, png, bmp

## 2.3. Template

This screen displays the predefined templates and the user fills them and prepares them for use. User-created templates are kept in the **My Templates** folder. They can be played, edited and deleted from here.

### 2.3.1. Creation of the Templates

Scroll to one of the previously defined templates and press **OK**. When the **OK** button is pressed on the zones, the compatible content in the memory is listed. Single or multiple selections can be made here. The template can be previewed with the **Preview** button on the right hand side of the screen. Use the **Save** button to save the template.

#### 2.3.1.1. Add Content to Templates Input Fields

**Template Duration:** The length of time that the template will be displayed in a programme cycle.

**Content Duration:** Specifies the amount of time a content will be displayed in the selected area via the template.

**Template Name:** Specify a name for the template.

**Aspect Ratio:** If the area on the template accepts the image, this setting determines whether the aspect ratio of the image is maintained or changed to fill the area.

**Sound:** If there is a field that accepts video in the template, it determines whether the video will sound or not.

## 2.4. Import/Export Settings

Using this menu, the Display settings can be transferred to another Display.

### 2.5. Switch to Vsign Lite Portrait Orientation

The user can rotate the screen 90 degrees clockwise or counterclockwise by selecting **Portrait1** or **Portrait2** using the **OSD Orientation** in the **Display Settings > Signage Settings > Controls** menu. The application will be rotated vertically.

## Media Player

Highlight **Media Player** on the Home Screen and press **OK** to launch the app. You can also press the **Media**

**Player** button on the remote for quick access. Select the media type on the main media player screen.

## Image Files

Press **OK** to display the highlighted photo file. On the upper left and right of the screen some options will be available. Using these options you can sort or group the files, change the viewing style, start a slideshow, etc. You will also be able to select the files, then make the selected files available offline, share them via short-range wireless connection (depends on the model), rotate left/right or refresh the screen or access more settings using the related options.

When you start a slide show, all photo files in the current folder will be displayed in an infinite loop. Press the **OK** or **Return/Back** button to stop the slide show.

## Music Files

You can use the tabs at the top of the screen to sort the files. Press **OK** to play back the highlighted music/audio file. Now Playing screen will be displayed. You can use the options here to control the media.

## The Media Control Buttons on the Now Playing Screen

**Play List:** Display the now playing playlist.

**Shuffle:** Highlight and press **OK** to turn the shuffle option on or off. When the shuffle mode is on, all of the music files in the current playlist are played in a random order.

**Repeat:** Highlight and press **OK** to turn on or off the repeating option for the playing file or all files in the current playlist. Press **OK** consecutively to change the functionality. All music files in the current list or the currently playing file will be repeatedly played back.

**Pause/Play:** Highlight and press **OK** to pause and resume the playback.

**Start from beginning/Previous File:** Highlight and press **OK** to start the playback from the beginning or switch to the previous file in the list.

**Next File:** Highlight and press **OK** to switch to the next file in the list.

**Playback Progress Bar:** Highlight and use Left/Right directional buttons to fast forward or rewind the playback.

## Video Files

Select the drive as **Local Disk** or the connected USB storage device. Highlight a video file and press **OK** to play it back. You can use the buttons on the info bar to control the video playback, and configure the settings. The info bar will disappear after a certain period of time. Press **OK** to reveal the info bar again.

## From USB Connection

**IMPORTANT!** Back up the files on your USB storage devices before connecting them to the Display. Manufacturer will not be responsible for any file damage or data loss. Certain types of USB devices (e.g. MP3 Players) or USB hard disk drives/memory sticks may not be compatible with this Display. The Display supports FAT32 and NTFS disk formatting. FAT32 formatted devices with a storage capacity larger than 192TB are not supported. NTFS formatted devices with a storage capacity larger than 16TB are not supported.

You can view your photos, text documents or play your music and video files installed on a connected USB storage device on the Display. Plug in the USB storage device to one of the USB inputs on the Display.

On the main media player screen select the desired media type. Then, highlight a media file and press the **OK** button. Follow the on-screen instructions and see the related sections above for more information on other available button functions.

**Note:** Wait a little while before each plugging and unplugging as the player may still be reading files. It is recommended to use the **Safely Remove** option in the **Signage Settings > USB** menu or the **USB Safely Remove** option in the **File Manager** application. Failure to do so may cause physical damage to the USB player and the USB device itself. Do not pull out your drive while playing a file.

## USB Auto Play Feature

This feature is used to start playing the media content installed on a removable device automatically. It uses the Media Player application. The media content types have different priorities in order to be played. The reducing priority order is as Photo, Video and Audio. That means, if there is Photo content in the root directory of the removable device, Media Player will play the Photos in a sequence (in file name order) instead of Video or Audio files. If not, it will be checked for Video content and as last Audio.

This feature will only work if all of the following circumstances occur:

- The USB device is plugged in.
- The **USB Auto Play** option is enabled. It can be found in the **Display Settings > System Settings > More** menu.

## CEC and CEC RC Passthrough

This function allows to control the CEC-enabled devices, that are connected through HDMI ports by using the remote control of the Display.

The **CEC** option in the **Display Settings > System Settings > More** menu should be set to **Enabled** at first. Press the **Source** button and select the HDMI input of the connected CEC device from the **Source** menu. When a new CEC source device is connected, it will be listed in the source menu with its own name



instead of the connected HDMI port's name (such as DVD Player, Recorder 1, etc.).

The Display remote is automatically able to perform the main functions after the connected HDMI source has been selected. To terminate this operation and control the Display via the remote again, press and hold the "0-Zero" button on the remote control for 3 seconds.

You can disable the CEC functionality by setting the related option under the **Display Settings > System Settings > More** menu accordingly.

The Display also supports the ARC (Audio Return Channel) feature. This feature is an audio link meant to replace other cables between the Display and an audio system (A/V receiver or speaker system).

When ARC is active, the Display does not mute its other audio outputs automatically. You will need to decrease Display volume to zero manually if you wish to hear the ARC audio only (same as optical or co-axial digital audio outputs, availability depends on the model). If you want to change connected device's volume level, you should select that device from the source list. In that case volume control keys are directed to connected audio device.

## System Audio Control

Allows an Audio Amplifier/Receiver to be used with the Display. The volume can be controlled using the remote control of the Display. To activate this feature set the **Speakers** option in the **Display Settings>Sound** menu to **External audio system**. The Display speakers will be muted and the sound of the watched source will be provided from the connected sound system.

*Note: The audio device should support System Audio Control feature and CEC option should be set to Enabled.*

## Changing the Start and Settings URL's

- Create a file named "starturl.txt" or "settingsurl.txt" in the root directory of any USB storage device. Make sure that the extension is ".txt".
- Open this file with a text editor software such as Notepad.
- Write the desired URL (for example, www.starturl.com) in the file and save changes.
- Connect the USB storage device to the Display. Highlight the **USB Operations** option in the **Display Settings>Signage Settings>USB** menu and press **OK**.
- Switch the Display off and then switch it on again.

*Note: You can check if the Start URL or Settings URL have the desired link from the **Display Settings>Signage Settings>Link Options** menu.*

## OSD Rotation Support

You can change the OSD (On-Screen Display) rotation of your Display if desired. While performing initial setup set the **OSD Orientation** option as desired when the **Signage Settings** menu is displayed. You can also change this setting later from the **Display Settings > Signage Settings > Controls** menu. Available options are: **Landscape, Portrait1, Portrait2, and Auto**.

When set to **Auto**, the Display will use the integrated gyro sensor to detect its current rotation automatically and change the OSD orientation accordingly.

## USB TYPE-C

Multiple protocols and power delivery up to 5V@1.5A are supported via USB-C port on your Display. USB Type-C features are compatible with the devices that meet the USB-Type-C-Specification. 4K video stream (if the source supports DP alternate mode), USB 2.0 data transmission and 5V@1.5A power delivery are supported through the USB-C connection that handle the plug orientation.

*Note: It is recommended to use Electronically Marked USB-C to USB-C cable for video stream over Type-C connection. Also e-marked USB-C to USB-A cable can be used for data transmission.*

## HDMI Out

The HDMI port located on the rear left side of the Display functions as an output port (upper HDMI port, HDMI out). This port will not function as an input, thus no source devices should be connected to this port. Only the content received from the HDMI1 input port located also on the rear left side of the Display (the one under the HDMI Out port) can be outputted from this port. The content received from other inputs, such as Display Port (depends on the model), can not be outputted. This is a default function and you can not disable/enable through any menu option. HDMI Out port will always function if a source device is connected to the HDMI1 input.

## Real Time Clock (RTC)

Your Display has an RTC. It is used to maintain the real date and time information for a period of time if the energy supply is interrupted by separating the Display from the mains or by a power blackout. In this case the Display will use the date and time information stored in RTC.

- All time sources are able to override RTC date/time.
- Display tries to connect to the **NTP server** periodically (6 hours after last update) to get the current date and time information. If the Display successfully gets

this information from the NTP server, it updates itself and RTC with the received date and time information. If the NTP server update fails, the Display uses RTC time and date to update itself.

- The RTC battery provides power to the integrated real-time clock and the calendar. Without any external power source, RTC is able to function for a minimum of 14 days.
- If RTC is used as time source, manual date-time set is enabled from the **Date/Time** option in the **Display Settings > System Settings** menu.

## Crestron Connected

In order to work with Crestron Connected protocol, "CrestronConnected" profile option should be enabled.


Flash UI which is served by the display device is not supported. Flash UI which is served by the control system can be used. Flash UI will not be directly connected to display device but will be connected indirectly over control system in this case.

Widi source is not visible to the Crestron Connected interfaces (e.g. Roomview, Xpanel). The reason is when we select this source the connection is broken and therefore could not communicate with crestron devices again.

Configuration page to set control system ip address/hostname, ip id, and port can be reached by writing the ip address of display to the browser address bar on your computer.

If SecureCommand profile option is enabled, configuration page is opened with a password dialogue. After entering the correct password configuration dialogue appears. Password is the same with the one used in SETUSERSECLEVEL command.

## Controlling With An External PC

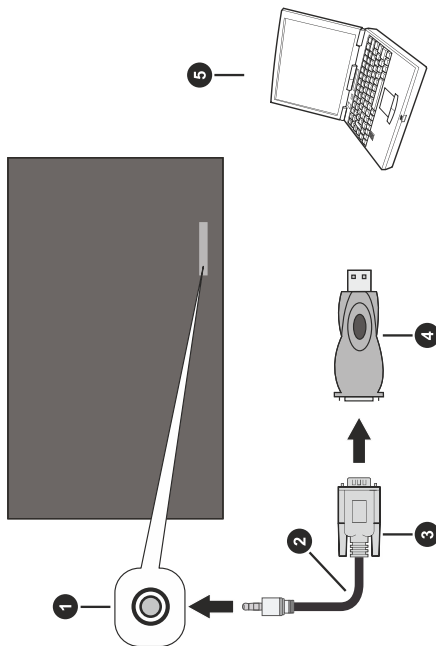

1. RS-232 Input Socket (3.5mm)
2. RS-232 to 3.5mm serial cable (commercially available)
3. To COM port
4. RS-232 to USB adapter
5. PC

You can control the Display from an external PC via RS-232 (COM port) or LAN (Ethernet port) on the PC. For instance, system source can be changed by RS-232 from remote computer. When a command is sent from the PC to the Display, the Display operates according to the received command and sends a response message to the PC.

### Equipment/Tools


- RS-232 (3.5mm) to RS-232 (male) cable or LAN cable (connected via router)
- USB to RS-232 (female) adapter
- Notebook or PC which has USB or LAN port
- Installed program on remote PC to send commands

In general, the RS-232 commands are sent for operating the implemented functions via serial port

and utility. A suitable utility can be used such as described below.

### Connecting to the Display (RS232 port)

Run the software and select **Serial** as **Connection Type**. Enter the Display's serial port in the field **Serial Line** (in the following example it is COM4) and "115200" in the field **Speed**. Then click the **Open** button.

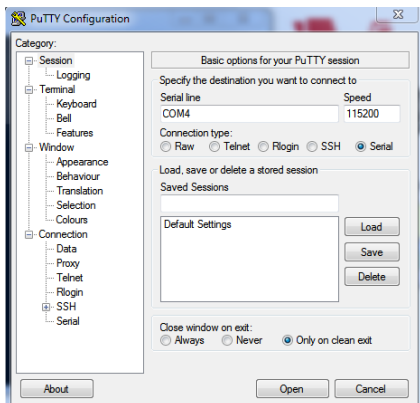

## RS232/LAN Command Table

Command	Parameters	Return Values
<b>SELECTSOURCE</b>	7 = HDMI1 8 = HDMI2 9 = HDMI3 10 = HDMI4 12 = VGA-PC 19 = DP 20 = OPS 26 = TYPE-C	"SELECTSOURCE 12 OK" OR "Not valid source index parameter entered"
<b>get_mac_address</b>	"get_mac_address [string1]" [string1] eth0 = for Ethernet Mac wifi = for Wifi Mac bt = for Bluetooth Mac	Sample of some return values "#*Hwaddr: 00:09:DF:0F:4A:BC - Successful"
<b>set_mac_address</b>	"set_mac_address [string1][string2]" [string1] eth0- = for Ethernet Mac wifi- = for Wifi Mac bt- = for Bluetooth Mac [string2] Address information (xx:xx:xx:xx:xx:xx)	#*SetMacAdress Succesfull #*SetMacAdress NOK
<b>get_IP_address</b>	No Parameter	Sample of some return values "#*IPaddr: 192.168.204.125"
<b>STANDBY</b>	No Parameter	Changes state of device to ST-BY immediately
<b>STARTFTI</b>	No Parameter	Starts to Erase some Files and Restart immediately.
<b>SETBACKLIGHT</b>	1: listed below are available ON = to Logic High OFF = to Logic Low Usage "SETBACKLIGHT ON" or "SETBACKLIGHT OFF"	Changes Backlight Output Voltage
<b>BACKLIGHTDIM</b>	1: listed below are available off = to Logic Low low = to Logic Medium high = to Logic High Usage "BACKLIGHTDIM off" or "BACKLIGHTDIM low" or "BACKLIGHTDIM high"	Changes Dimming Output Voltage
<b>PICTUREMODE</b>	1: listed below are available 1 = Dynamic 2 = Natural 3 = Cinema Usage "PICTUREMODE 1"	Changes the Picture Mode
<b>GET_DIMMING_LEVEL</b>	No Parameter	Returns Dimming Level

<b>GETPICTUREMODE</b>	No Parameter	Provides Picture mode state Information Sample of some return values “#*PICTURE MODE IS DYNAMIC” or “#*PICTURE MODE IS NATURAL”
<b>COLOURTEMP</b>	“COLOURTEMP [string]” [string] “normal” = sets value as normal “warm” = sets value as warm “cool” = sets value as cool	Set Colour Temperature Value Sample of some return values “#*Colourtemp is normal”
<b>SETWB</b>	“SETWB [string] [value]” [string] “redgain” = sets redgain value “bluegain” = sets bluegain value “greengain” = sets greengain value “redoffset” = sets redoffset value “blueoffset” = sets blueoffset value “greenoffset” = sets greenoffset value [value] Value can be between 0 and 255.	Set RGB Gain &Offset Values Sample of some return values “#*WB-bluegain is set to 219”
<b>GETWB</b>	“GETWB [string]” [string] “redgain” = returns redgain value “bluegain” = returns bluegain value “greengain” = returns greengain value “redoffset” = returns redoffset value “blueoffset” = returns blueoffset value “greenoffset” = returns greenoffset value	Read RGB Gain & Offset Values #*redgain 125
<b>INCWB</b>	“INCWB [string] [value]” [string] “redgain” = increments redgain value “bluegain” = increments bluegain value “greengain” = increments greengain value “redoffset” = increments redoffset value “blueoffset” = increments blueoffset value “greenoffset” = increments greenoffset value [value] Value can be between 0 and 255.	Increment RGB &Offset Values Sample of some return values “#*INCWB-bluegain is incremented 12”
<b>DECWB</b>	“DECWB [string] [value]” [string] “redgain” = decrements redgain value “bluegain” = decrements bluegain value “greengain” = decrements greengain value “redoffset” = decrements redoffset value “blueoffset” = decrements blueoffset value “greenoffset” = decrements greenoffset value [value] Value can be between 0 and 255.	Sample of some return values “#*DECWB-bluegain is decremented 12”

<b>GETSOURCE</b>		Sample of some return values <code>##ACTIVE_SOURCE HDMI-1</code> or <code>##ACTIVE_SOURCE DP</code>
<b>WifiConnectTest2</b>	1: SSID adr which address of the device will be connect. 2: Pinging address Usage "WifiConnectTest2 1234567890 http://10.0.0.3"	Testing of Connection of Wifi at 2.4GHZ. When Connecting Succesfull <code>##WifiConnect2 Succesfull</code> When Connecting Not Succesfull <code>##WifiConnect2 Not Succesfull</code>
<b>WifiConnectTest5</b>	1: SSID adr which address of the device will be connect. 2: Pinging address Usage "WifiConnectTest5 1234567890 http://10.0.0.3"	Testing of Connection of Wifi at 5GHZ. When Connecting Succesfull <code>##WifiConnect5 Succesfull</code> When Connecting Not Succesfull <code>##WifiConnect5 Not Succesfull</code>
<b>CHECK_EDID</b>	"CHECK_EDID [string1]" [string1] ALL (returns the EDID results with Hash for All Source) VGA HDMI1 (for EDID 1.4) HDMI2 (for EDID 1.4) HDMI3 (for EDID 1.4) HDMI4 (for EDID 1.4) DP (for EDID 1.4) OPS (for EDID 1.4) HDMI1_2.0 (for EDID 2.0) HDMI2_2.0 (for EDID 2.0) HDMI3_2.0 (for EDID 2.0) HDMI4_2.0 (for EDID 2.0) DP_2.0 (for EDID 2.0) OPS_2.0 (for EDID 2.0)	<code>##EDID [string1] [string2] [string3]</code> [string1] Same List on the string1 of Command parameter1 is valid. [string2] "OK - " = When The related Edid is OK "NOK" = When The related Edid is NOK [string3] md5 checksum value of selected Item's. (will only send on Succesfull)
<b>GETRCFORMAT</b>		Returns the rc format information used on the Board. <code>##RC = [string]</code> [string] "PHILIPS" "NEC" "JVC" "SHARP" Sample of some return values <code>##RC = NEC</code>
<b>VOLUME</b>	1: The Volume level to be Set. XX(Decimal Value) Usage "VOLUME 55" or "VOLUME 27"	Controls the Speaker volume Level.
<b>GETVOLUME</b>		Returns the Speaker volume Level Sample of some return values <code>##volume level is 59</code>
<b>HEADPHONEVOLUME</b>	Usage "HEADPHONEVOLUME 55" or "HEADPHONEVOLUME 27"	Controls the headphone volume. <code>##set headphone volume to xx</code> Example: <code>##set headphone volume to 55</code>

<b>GETHEADPHONEVOLUME</b>		Returns the Headphone volume Level Sample of some return values "##headphone volume is 59"
<b>Led</b>	1: listed below are available 0 = Leds OFF 1 = Leds ON Usage "Led 0"	Reverses led outputs between each other. Sample of some return values "##Led set to 1"
<b>KEY</b>	1: listed below table are available Usage "KEY 0" or "KEY up" or "KEY text"	Sends Key Commands
<b>check_usb_plugged</b>		The number of attached USB2.0 devices must be returned. Sample of some return values "##Removable Device Count: 1" or "##Removable Device Count: 2" or "##Removable Device Not Exist"
<b>GETTVINFO</b>		*****TV INFO***** ##*project: ##*hardware: ##*ram: ##*sw version: ##*svn no: ##*mboot ver: ##*mfc ver: ##*ip address: ##*ui name: ##*lang: ##*country: ##*customer:
<b>get_bootlogo_name</b>		Provides Bootlogo name. Sample of return of the file name "##Bootlogo Name: NULL" or "##Bootlogo Name: MB170_1920_1080_BLANK_ BOOTLOGO.jpg" or "##Bootlogo Name: Boot_toshiba_ logo_VESTEL_130422.png"
<b>set_IP_address</b>	Usage "set_IP_address 192.168.204.125"	Sets the IP address of the Main Board ##*IP address setting Succesfull or ##*IP address setting NOK
<b>GET_SW_VER</b>		Returns Sw version info Sample of some return values "##SW_VER: v13.4"

<p><b>screen_capture_usb</b></p>	<p>"screen_capture_usb [string1]-[string2]" [string1] "xxxxxx.yyy" = is FILENAME CAPTURE (2812345678901234_HDMI1_1.bmp) [string2] "0" = for UI "1" = for MHEG "2" = for Teletext "8" = for video Usage "screen_capture_usb 2812345678901234_HDMI1_1.bmp 8"</p>	<p>Screen Capture USB command Sample of some return values #*Screen capture is successful. #*Screen capture failed!</p>
<p><b>SETKEY</b></p>	<p>"SETKEY [string1] [string2]-[string3] [string4]" [string1] -- (key file type) PLYRDY = for PlayReady (for Amazon) PR2XBG = for PlayReady 2.5XBG PR2XZG = for PlayReady 2.5XZG PR3XBG = for PlayReady 3.0XBG PR3XZG = for PlayReady 3.0XZG PR4XBG = for PlayReady 4.0XBG PR4XZG = for PlayReady 4.0XZG WV = for WideVine CIPLUS = for CI+ CIPLUSECP = for CI+ ECP HDCP14 = for HDCP1.4 HDCP22 = for HDCP2.2 HASH = for HASH KEYMASTER = for KEYMASTER ESNKPEKPH = for NETFLIX ESN (combined ESN and KPEKPH) PEK = for PEK LEK = for LEK FVPOEM = for OEM.P12 file FVPVESTEL = for VESTEL_MB170_FVP_KEY.P12 file FVPINTERMEDIATE = for VESTEL_MB170_FVP_INTERMEDIATE_NOENCRYPT.key MARLIN = for MARLIN PROV = for PROVISION file FAIRPLAY = for FAIRPLAY file YOUTUBE = for YOUTUBE file TAM = for NOVATEK platforms [string2] The Packet Number of the Data that divided into packets. [string3] The Total Packet Number of the Data that divided into packets. [string4] All data to be sent. These will be Base64 Encoded. (Depending on the buffer memory of the receiving device, the amount of data sent may differ.)</p>	<p>Sets unique keys on TV over Uart. "#"[string1] [string2] [string3]" [string1] -- (key file type) Same List on the string1 of Command parameter1 is valid. [string2] "OK - " [string3] md5 checksum value which is calculated over Base64 Encoded data received (will only send on Successful)</p>



<b>GETSERIALNO</b>		Retrieve Current Serial No Sample of some return values "#7466809500012"
<b>SETSERIALNO</b>	Usage "SETSERIALNO 7466809500012" or "SETSERIALNO YN1A1234000001"	Sets Serial No Sample of some return values "#ACK"
<b>GETKEY</b>	"GETKEY [string1]" [string1] -- (key file type) PLYRDY = for PlayReady (for Amazon) PR2XBG = for PlayReady 2.5XBG PR2XZG = for PlayReady 2.5XZG PR3XBG = for PlayReady 3.0XBG PR3XZG = for PlayReady 3.0XZG PR4XBG = for PlayReady 4.0XBG PR4XZG = for PlayReady 4.0XZG WV = for WideVine CIPLUS = for CI+ CIPLUSECP = for CI+ ECP HDCP14 = for HDCP1.4 HDCP22 = for HDCP2.2 HASH = for HASH KEYMASTER = for KEYMASTER ESN = for NETFLIX ESN KPEKPH = for NETFLIX KPEKPH PEK = for PEK LEK = for LEK FVPOEM = for OEM.P12 file FVPVSTEL = for VESTEL_MB170_ FVP_KEY.P12 file FVPINTERMEDIATE = for VESTEL_ MB170_FVP_INTERMEDIATE_ NOENCYPT.key MARLIN = for MARLIN PROV = for PROVISION file FAIRPLAY = for FAIRPLAY file YOUTUBE = for YOUTUBE file TAM = for NOVATEK platforms	Gets the MD5 checksum Value of entire data of specified unique key. "#[string1] [string2] [string3]" [string1] -- (key file type) Same List on the string1 of Command parameter1 is valid. [string2] "OK - " "NOK " [string3] md5 checksum value. (will only send on Succesfull)
<b>get_bootlogo_mp3_name</b>		Returns the md5 checksum value and name of the mp3 file that attached to the bootlogo File. Sample of return of the file name "#Bootlogo MP3: NULL" or "#Bootlogo MP3: NOKIA sound. mp3 - 0xb8ae737dc1df3313bf61d- 143c0119e4f" or "#Bootlogo MP3: MB170_NO- BOOTMUSIC.mp3 - 0xb8ae737d- c1df3313bf61d143c0119e4f"
<b>SETDYNAMICCONTRAST</b>	"SETDYNAMICCONTRAST [string]" [string] "0" = LOW "1" = MEDIUM "2" = HIGH "3" = OFF	Sample of some return values "#Dynamic contrast value is set to OFF"
<b>SETMICRODIMMING</b>	SETMICRODIMMING	Sample of some return values "#Set Micro Dimming Level OFF"

<b>SETBLUESTRECH</b>	"SETBLUESTRECH [string]" [string] "0" = OFF "1" = ON	Sample of some return values ##SetBluestrech() set to OFF"
<b>SETMODELNO</b>	Usage "SETMODELNO 24HFL2839" or "SETMODELNO 19PFL3007E/12"	Sets Model No Sample of some return values "##ACK"
<b>GETMODELNO</b>		Retrieve Current Model No Sample of some return values "##24HFL2839"
<b>STOREWB</b>		Set RGB gain Values to default ##STORE WB OK or ##STORE WB NOK
<b>TON</b>	integer (volume value)	#Display will be turned on OR #Display is not in Active Standby state!
<b>SETSTARTUPSOURCE</b>	integer n (autostartupposition = 0, 1 ≤ otherpositions ≤ 15) Source Index (n=5) HDMI1 (n=6) DISPLAYPORT (n=7) OPS (n=8) HDMI2 (n=9) HDMI3 (n=10) HDMI4 (n=11) TYPE C (n=13) VGA	##ACK OR ##NACK
<b>check_microsd_plugged</b>		Sample of some return values "##MicroSD Exist" or "##MicroSD Not Exist"

# RS232 HEX Commands

## Protocol Test Steps

- Before testing, please know the board type you have. There are two types of board. The UART 0 and UART 1 connections of the these boards are explained below:
  1. RJ12 is connected to UART 0, DSUB9 is connected to UART 1. Therefore, UART 0 and UART 1 could be tested separately in this type of the board
  2. RJ12 and DSUB9 both are connected to UART 0. UART 1 is supported for OPS module but not reachable. Therefore, only UART 0 could be tested in this type of the board.
- Activate HEX protocol on Display.
  - a. Enter **Display Settings > Signage Settings > Controls** menu
  - b. Change the **ASCII** option to **HEX** in **UART0** or **UART1** sub-menu item
- Open any serial port communications program (e.g Realterm). Configure serial communication settings as below:

<b>Baud Rate</b>	: 19200 for UART0, 9600 for UART1
<b>Parity</b>	: None
<b>Data Bits</b>	: 8
<b>Stop Bits</b>	: 1
<b>Handshake</b>	: None
- Note that **UART0** default value: **ASCII**, **UART1** default value: **HEX**  
In the tables given below, XY represents are variable byte.  
All byte values are hexadecimal.

## Error Responses

- **NAK reply: 15** When the display cannot understand the received command, it returns this value. In such a case, check the sending code and send the same command again.
- **Error reply: 1C 00 00** When the display cannot execute the received command for any reasons, it returns this value. In such a case, check the sending code and the setting status of the display.

Command received by display														Reply sent by display for successful operation			Notes	
Byte Number		0	1	2	3	4	5	6	7	8	9	10	11	12	0	1		2
		Header						Data										
		Header code		Packet	Data Size		CRC flag		Action		Type		Setting code					
Name	Operation	L	H		L	H	L	H	L	H	L	H	L	H				
Monitor	ON	BE	EF	03	06	00	19	D3	02	00	00	60	02	00	06			Power Mode (Quick Standby) should be enabled to be able to turn on the Display with this command.
	OFF	BE	EF	03	06	00	19	D3	02	00	00	60	01	00	06			
	GET	BE	EF	03	06	00	19	D8	03	00	00	60	07	00	1D	00	XY	
Mute	ON	BE	EF	03	06	00	D6	D2	01	00	02	20	01	00	06			
	OFF	BE	EF	03	06	00	46	D3	01	00	02	20	00	00	06			
	GET	BE	EF	03	06	00	75	D3	02	00	02	20	00	00	1D	00	XY	XY can be either 00 or 01. 00 means OFF, 01 means ON.
Screen	ON	BE	EF	03	06	00	6B	D9	01	00	20	30	01	00	06			
	OFF	BE	EF	03	06	00	FB	D8	01	00	20	30	00	00	06			
	GET	BE	EF	03	06	00	C8	D8	02	00	20	30	00	00	1D	00	XY	XY can be either 00 or 01. 00 means OFF, 01 means ON.
Source	OPS	BE	EF	03	06	00	FE	D2	01	00	00	20	00	00	06			
	HDMI	BE	EF	03	06	00	0E	D2	01	00	00	20	03	00	06			
	VGA	BE	EF	03	06	00	6E	D2	01	00	00	20	01	00	06			
	SCART2 (CVBS)	BE	EF	03	06	00	00	00	01	00	00	20	04	00	06			
	FAV	BE	EF	03	06	00	00	00	01	00	00	20	05	00	06			
	S-Video	BE	EF	03	06	00	00	00	01	00	00	20	06	00	06			
Source	HDMI2	BE	EF	03	06	00	00	00	01	00	00	20	08	00	06			
	HDMI3	BE	EF	03	06	00	00	00	01	00	00	20	09	00	06			
	HDMI4	BE	EF	03	06	00	00	00	01	00	00	20	0A	00	06			
	YPbPr	BE	EF	03	06	00	00	00	01	00	00	20	0B	00	06			
	SCART2 (S-Video)	BE	EF	03	06	00	00	00	01	00	00	20	0D	00	06			
	TV	BE	EF	03	06	00	00	00	01	00	00	20	0E	00	06			
	SCART1 (CVBS)	BE	EF	03	06	00	00	00	01	00	00	20	0F	00	06			
	SCART1 (S-Video)	BE	EF	03	06	00	00	00	01	00	00	20	10	00	06			
	DVD	BE	EF	03	06	00	00	00	01	00	00	20	11	00	06			
	DVI	BE	EF	03	06	00	00	00	01	00	00	20	12	00	06			
	DP	BE	EF	03	06	00	00	00	01	00	00	20	13	00	06			
	WIDI	BE	EF	03	06	00	00	00	01	00	00	20	15	00	06			
	GET	BE	EF	03	06	00	CD	D2	02	00	00	20	00	00	1D	00	XY	XY can be one of the following: 01: OPS, 02: HDMI, 03: VGA, 04: SCART2(CVBS), 05: FAV, 06: S-Video, 08: HDMI2, 09: HDMI3, 0A: HDMI4, 0B: YPbPr, 0D: SCART2(S-Video), 0E: TV, 0F: SCART1(CVBS), 10: SCART1(S-Video), 11: DVD, 12: DVI, 13: DP, 15: WIDI  Note that all of the sources are not enabled.

Command received by display														Reply sent by display for successful operation			Notes	
Byte Number		0	1	2	3	4	5	6	7	8	9	10	11	12	0	1		2
		Header						Data										
		Header code		Packet	Data Size		CRC flag		Action		Type		Setting code					
Name	Operation	L	H		L	H	L	H	L	H	L	H	L	H				
Volume	GET	BE	EF	03	06	00	31	D3	02	00	01	20	00	00	1D	00	XY	
	INCREMENT	BE	EF	03	06	00	57	D3	04	00	01	20	00	00	06			
	DECREMENT	BE	EF	03	06	00	86	D2	05	00	01	20	00	00	06			
	SET	BE	EF	03	06	00	31	D3	03	00	01	20	01	XY	06			XY can take 00 as a minimum and 1D as a maximum.
OPS Power	ON	BE	EF	03	06	00	BA	D2	01	00	05	20	01	00	06			
	OFF	BE	EF	03	06	00	2A	D3	01	00	05	20	00	00	06			
	GET	BE	EF	03	06	00	19	D3	02	00	05	20	00	00	1D	00	XY	XY can be either 00 or 01. 00 means OFF, 01 means ON.
Backlight	GET	BE	EF	03	06	00	89	D2	02	00	03	20	00	00	1D	00	XY	
	INCREMENT	BE	EF	03	06	00	EF	D2	04	00	03	20	00	00	06			
	DECREMENT	BE	EF	03	06	00	3E	D3	05	00	03	20	00	00	06			
	SET	BE	EF	03	06	00	89	D2	03	00	03	20	01	XY	06			range: 0x64-0x1E
Auto Adjust	ON	BE	EF	03	06	00	32	D4	01	00	19	20	01	00	06			Auto Adjust command is for only VGA.
	OFF	BE	EF	03	06	00	A2	D5	01	00	19	20	00	00	06			
Keypad Lock	ON	BE	EF	03	06	00	93	97	01	00	11	24	01	00	06			
	OFF	BE	EF	03	06	00	03	96	01	00	11	24	00	00	06			
	GET	BE	EF	03	06	00	30	96	02	00	11	24	00	00	1D	00	XY	XY can be either 00 or 01. 00 means OFF, 01 means ON.
Remote Controller Lock	ON	BE	EF	03	06	00	77	97	01	00	16	24	00	00	06			
	OFF	BE	EF	03	06	00	E7	96	01	00	16	24	01	00	06			
	GET	BE	EF	03	06	00	44	97	02	00	16	24	00	00	1D	00	XY	XY can be either 00 or 01. 00 means OFF, 01 means ON.
OSD Menu	ON	BE	EF	03	06	00	6A	63	01	00	00	37	01	00	06			
	OFF	BE	EF	03	06	00	FA	62	01	00	00	37	00	00	06			
Contrast	GET	BE	EF	03	06	00	FD	D3	02	00	04	20	00	00	1D	00	XY	
	SET	BE	EF	03	06	00	FD	D3	03	00	04	20	01	XY	06			range: 0x4E - 0xB2
	INCREMENT	BE	EF	03	06	00	9B	D3	04	00	04	20	00	00	06			
	DECREMENT	BE	EF	03	06	00	4A	D2	05	00	04	20	00	00	06			
Auto Position	EXECUTE	BE	EF	03	06	00	91	D0	06	00	0A	20	00	00	06			
Color Temperature	INCREMENT	BE	EF	03	06	00	0B	F5	10	00	B0	30	03	00	06			9300K, 6500K, 13000K
	DECREMENT	BE	EF	03	06	00	CB	F8	01	00	B0	30	13	00	06			9300K, 6500K, 13000K
	GET	BE	EF	03	06	00	C8	F5	02	00	B0	30	00	00	1D	00	XY	XY takes one of the followings: 00=9300K, 01=6500K, 02=13000K
Clock	INCREMENT	BE	EF	03	06	00	19	D4	03	00	02	21	03	00	06			Clock commands are for VGA Clock. They would work independently of the selected source.
	DECREMENT	BE	EF	03	06	00	19	D5	03	00	02	21	04	00	06			
	GET	BE	EF	03	06	00	19	D7	03	00	02	21	06	00	1D	00	XY	XY would be in the range of 00 and 64
Phase	INCREMENT	BE	EF	03	06	00	2F	83	04	00	03	21	00	00	06			Phase commands are for VGA Phase shift. They would work independently of the selected source.
	DECREMENT	BE	EF	03	06	00	FE	82	05	00	03	21	00	00	06			
	GET	BE	EF	03	06	00	49	83	02	00	03	21	00	00	1D	00	XY	XY would be in the range of 00 and 64
H-Position	INCREMENT	BE	EF	03	06	00	97	82	04	00	01	21	00	00	06			
	DECREMENT	BE	EF	03	06	00	46	83	05	00	01	21	00	00	06			
GET	BE	EF	03	06	00	F1	82	02	00	01	21	00	00	1D	00	XY	XY would be in the range of 00 and 64. Central position is 32.	

Command received by display														Reply sent by display for successful operation			Notes	
Byte Number		0	1	2	3	4	5	6	7	8	9	10	11	12	0	1		2
		Header						Data										
		Header code		Packet	Data Size		CRC flag		Action		Type		Setting code					
Name	Operation	L	H		L	H	L	H	L	H	L	H	L	H				
VPosition	INCREMENT	BE	EF	03	06	00	6B	83	04	00	00	21	00	00	06			
	DECREMENT	BE	EF	03	06	00	BA	82	05	00	00	21	00	00	06			
	GET	BE	EF	03	06	00	0D	83	02	00	00	21	00	00	1D	00	XY	XY would be in the range of 00 and 64. Central position is 32.
Color Temp Gain R	INCREMENT	BE	EF	03	06	00	52	F4	04	00	B1	30	00	00	06			
	DECREMENT	BE	EF	03	06	00	83	F5	05	00	B1	30	00	00	06			
	GET	BE	EF	03	06	00	34	F4	02	00	B1	30	00	00	1D	00	XY	
Color Temp Gain G	INCREMENT	BE	EF	03	06	00	16	F4	04	00	B2	30	00	00	06			
	DECREMENT	BE	EF	03	06	00	C7	F5	05	00	B2	30	00	00	06			
	GET	BE	EF	03	06	00	70	F4	02	00	B2	30	00	00	1D	00	XY	
Color Temp Gain B	INCREMENT	BE	EF	03	06	00	EA	F5	04	00	B3	30	00	00	06			
	DECREMENT	BE	EF	03	06	00	3B	F4	05	00	B3	30	00	00	06			
	GET	BE	EF	03	06	00	8C	F5	02	00	B3	30	00	00	1D	00	XY	
Freeze	EXECUTE	BE	EF	03	06	00	00	00	06	00	C0	30	00	00	06			Toggles video freeze status.

## Maximum Pixel Rates

Please note that connection ports and other features shown here may vary depending on the Display model.  
For Ultra HD panels,

Source	Max. Resolution	Colour Space	Bits/Component	Pixel/Rate
HDMI	4K@60Hz	YCbCr4:4:4/RGB	8 bit	594MHz
OPS	4K@60Hz	YCbCr4:4:4/RGB	8 bit	594MHz
DP	4K@60Hz	YCbCr4:4:4/RGB	8 bit	594MHz
Type-C	4K@60Hz	YCbCr4:4:4/RGB	8 bit	594MHz

For FHD panels,

Source	Max. Resolution	Colour Space	Bits/Component	Pixel/Rate
HDMI	1080p@60Hz	YCbCr4:4:4	12 bit	222,75MHz
OPS	1080p@60Hz	YCbCr4:4:4	12 bit	222,75MHz

## Input Matrix

Please note that connection ports and other features shown here may vary depending on the Display model.

Timing	fH (kHz)	fV (Hz)	Dot clock (MHz)	Input			
				HDMI	Type-C	DP	
VESA	720 x 400	31.5	70.156	26.25	○	○	○
	640 x 480	31.469	59.95	25.175	○	○	○
	800 x 600	37.879	60.317	40	○	○	○
	1024 x 768	48.363	60.004	65	○	○	○
	1360 x 768	47.712	60.015	85.5	○	○	○
	1920 x 1080	67.5	60	148.5	○	○	○
ED	853x480p	31.5	60	27.03	○	○	○
	1024x576p	31.25	50	27	○	○	○
HD	1280x720p	37.5	50	74.25	○	○	○
		44.995	59.94	74.176	○	○	○
		45	60	74.25	○	○	○
	1920x1080i	28.13	50	74.25	○	○	○
		33.716	59.94	74.175	○	○	○
		33.75	60	74.25	○	○	○
	1920x1080p	56.25	50	148.5	○	○	○
		67.432	59.95	148.35	○	○	○
		67.5	60	148.5	○	○	○
UHD (Only for 4K models)	3840x2160p	67.5	30	297	○	○	○
	3840x2160p	135	60	594	○	○	

# Supported Media Formats from USB

## Video File Formats

Video Codec	Resolution	Bit Rate	Profile	Container
MPEG 1/2	1080P@ 60fps	80Mbps	MP@HL	MPEG program stream (.DAT, .VOB, .MPG, .MPEG), MPEG transport stream (.ts, .trp, .tp), MP4 (.mp4, .mov), 3GPP (.3gpp, .3gp), AVI (.avi), MKV (.mkv), ASF (.asf)
MPEG4	1080P@60fps	40Mbps	<ul style="list-style-type: none"> <li>Simple Profile</li> <li>Advanced Simple Profile@Level 5</li> <li>GMC is not supported</li> </ul>	MPEG program stream (.MPG, .MPEG), MP4 (.mp4, .mov), 3GPP (.3gpp, .3gp), AVI (.avi), MKV (.mkv), ASF (.asf)
Sorenson H.263	1080P@60fps	40Mbps		FLV (.flv), AVI (.avi), SWF (.swf)
H.263	1080P@60fps	40Mbps		MP4 (.mp4, .mov), 3GPP (.3gpp, .3gp), AVI (.avi), MKV (.mkv)
H.264	4096x2176@60fps 1080P@60fps	135Mbps	<ul style="list-style-type: none"> <li>Main Profile</li> <li>High Profile @Level 5.1</li> </ul>	FLV (.flv), MP4 (.mp4, .mov), 3GPP (.3gpp, .3gp), MPEG transport stream (.ts, .trp, .tp), ASF (.asf), WMV (.wmv), AVI (.avi), MKV (.mkv)
HEVC/H.265	4096x2176@60fps	100Mbps	Main/Main10 Profile, High Tier @Level 5.1	MP4 (.mp4, .mov), 3GPP (.3gpp, .3gp), MPEG transport stream (.ts, .trp, .tp), MKV (.mkv)
MVC	1080P@30fps	80Mbps		MPEG transport stream (.ts, .trp, .tp)
AVS	1080P@60fps	40Mbps	Jizhun profile @ Level 6.0	MPEG transport stream (.ts, .trp, .tp)
AVS+	1080P@60fps	50Mbps	Broadcasting profile@ Level 6.0.1.08.60	MPEG transport stream (.ts, .trp, .tp)
WMV3	1080P@60fps	40Mbps		ASF (.asf), AVI (.avi), MKV (.mkv), WMV (.wmv)
VC1	1080P@60fps	40Mbps	<ul style="list-style-type: none"> <li>Advanced Profile @ Level 3</li> <li>Simple Profile</li> <li>Main Profile</li> </ul>	MPEG program stream (.MPG, .MPEG), MPEG transport stream (.ts, .trp, .tp), ASF (.asf), WMV (.wmv), AVI (.avi), MKV (.mkv)
Motion JPEG	1080P@30fps	10Mbps		AVI (.avi), 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov), MKV (.mkv), ASF (.asf)
VP8	1080P@60fps	20Mbps		MKV (.mkv), WebM (.webm)
VP9	4096x2176@60fps	100Mbps	Profile0/2	MKV (.mkv), WebM (.webm)
RV30/RV40	1080P@60fps	40Mbps		RM (.rm, .rmvb)

## Audio File Formats

Audio Codec	Sample rate	Channel	Bit Rate	Container	Note
MPEG1/2 Layer1	16KHz ~ 48KHz	Up to 2	32Kbps ~ 448Kbps	<b>Movie:</b> AVI (.avi), ASF (.asf), Matroska (.mkv), MPEG transport stream (.ts, .trp, .tp), MPEG program stream (.DAT, .VOB, .MPG, .MPEG) <b>Music:</b> MP3 (.mp3), WAV (.wav)	



Audio Codec	Sample rate	Channel	Bit Rate	Container	Note
MPEG1/2 Layer2	16KHz ~ 48KHz	Up to 2	8Kbps ~ 384Kbps	<b>Movie:</b> AVI (.avi), ASF (.asf), Matroska (.mkv), MPEG transport stream (.ts, .trp, .tp), MPEG program stream (.DAT, .VOB, .MPG, .MPEG) <b>Music:</b> MP3 (.mp3), WAV (.wav)	
MPEG1/2 Layer3	16KHz ~ 48KHz	Up to 2	8Kbps ~ 320Kbps	<b>Movie:</b> AVI (.avi), ASF (.asf), Matroska (.mkv), 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov), MPEG transport stream (.ts, .trp, .tp), MPEG program stream (.DAT, .VOB, .MPG, .MPEG), FLV (.flv), SWF (.swf) <b>Music:</b> MP3 (.mp3), WAV (.wav), MP4 (.m4a)	
AC3	32KHz, 44.1KHz, 48KHz	Up to 5.1	32Kbps ~ 640 Kbps	<b>Movie:</b> AVI (.avi), Matroska (.mkv), 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov), MPEG transport stream (.ts, .trp, .tp), MPEG program stream (.DAT, .VOB, .MPG, .MPEG) <b>Music:</b> AC3 (.ac3), MP4 (.m4a)	
EAC3	32KHz, 44.1KHz, 48KHz	Up to 5.1	32Kbps ~ 6 Mbps	<b>Movie:</b> 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov), MPEG transport stream (.ts, .trp, .tp), MPEG program stream (.DAT, .VOB, .MPG, .MPEG) <b>Music:</b> EAC3 (.ec3), MP4 (.m4a)	
AAC-LC, HEAAC	8KHz ~ 48KHz	Up to 5.1		<b>Movie:</b> AVI (.avi), Matroska (.mkv), 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov), MPEG transport stream (.ts, .trp, .tp), MPEG program stream (.DAT, .VOB, .MPG, .MPEG), FLV (.flv), RM (.rm, .rmvb) <b>Music:</b> AAC (.aac), MP4 (.m4a)	
WMA	8KHz ~ 48KHz	Up to 2	128bps ~ 320Kbps	<b>Movie:</b> ASF (.wmv, .asf), AVI (.avi), Matroska (.mkv) <b>Music:</b> ASF (.wma)	WMA 7, WMA 8, WMA 9, Standard
WMA 10 Pro M0	48KHz	Up to 2	< 192kbps	<b>Movie:</b> ASF (.wmv, .asf), AVI (.avi), Matroska (.mkv) <b>Music:</b> ASF (.wma)	No LBR mode
WMA 10 Pro M1	48KHz	Up to 5.1	< 384kbps	<b>Movie:</b> ASF (.wmv, .asf), AVI (.avi), Matroska (.mkv) <b>Music:</b> ASF (.wma)	
WMA 10 Pro M2	96KHz	Up to 5.1	< 768kbps	<b>Movie:</b> ASF (.wmv, .asf), AVI (.avi), Matroska (.mkv) <b>Music:</b> ASF (.wma)	
VORBIS	Up to 48KHz	Up to 2		<b>Movie:</b> Matroska (.mkv), WebM (.webm), 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov) <b>Music:</b> MP4 (.m4a), OGG (.ogg)	Supports stereo decoding only
DTS	Up to 48KHz	Up to 5.1	< 1.5Mbps	<b>Movie:</b> MPEG transport stream (.ts, .trp, .tp), MPEG program stream (.DAT, .VOB, .MPG, .MPEG), MP4 (.mp4, .mov), Matroska (.mkv)	

Audio Codec	Sample rate	Channel	Bit Rate	Container	Note
LPCM	8KHz ~ 48KHz	Up to 5.1	64Kbps ~ 1.5Mbps	<b>Movie:</b> AVI (.avi), Matroska (.mkv), 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov), MPEG transport stream (.ts, .trp, .tp), MPEG program stream, (.DAT, .VOB, .MPG, .MPEG) <b>Music:</b> WAV (.wav), MP4 (.m4a)	
IMA-ADPCM MS-ADPCM	8KHz ~ 48KHz	Up to 2	384Kbps	<b>Movie:</b> AVI (.avi), Matroska (.mkv), 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov) <b>Music:</b> WAV (.wav), MP4 (.m4a)	
G711 A/mu-law	8KHz	Up to 2	64Kbps ~ 128Kbps	<b>Movie:</b> AVI (.avi), Matroska (.mkv), 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov) <b>Music:</b> WAV (.wav), MP4 (.m4a)	
LBR (cook)	8KHz 11.025KHz, 22.05KHz, 44.1KHz	Up to 5.1	6Kbps ~ 128Kbps	<b>Movie:</b> RM (.rm, .rmvb)	
FLAC	8KHz~96KHz	Up to 5.1	< 1.6Mbps	<b>Movie:</b> Matroska (.mkv, .mka) <b>Music:</b> FLAC(.flac)	
DTS LBR	12KHz, 22KHz, 24KHz, 44.1KHz, 48KHz	Up to 5.1	up to 2Mbps	<b>Movie:</b> MP4 (.mp4, .mov)	
DTS XLL	Up to 96KHz	Up to 6		<b>Movie:</b> MPEG transport stream (.ts, .trp, .tp), MP4 (.mp4, .mov)	
DRA	8KHz~96KHz	Up to 7.1	< 1533Kbps	<b>Movie:</b> MPEG transport stream (.ts, .trp)	

## Picture File Formats

Image	Photo	Resolution (width x height)
JPEG	Base-line	15360x8640 (1920x8 x 1080x8)
	Progressive	1024x768
PNG	non-interlace	9600x6400
	interlace	1200x800
BMP		9600x6400
MPO	Base-line	15360x8640 (1920x8 x 1080x8)
	Progressive	1024x768
GIF		6400x4800 (800x8 x 600x8)

## Subtitle File Formats

### Internal

File Extension	Container	Subtitle Codec
dat, mpg, mpeg, vob	MPG, MPEG	DVD Subtitle
ts, trp, tp	TS	DVB Subtitle
mp4	MP4	DVD Subtitle UTF-8 Plain Text
mkv	MKV	ASS SSA UTF-8 Plain Text VobSub DVD Subtitle
avi	AVI(1.0, 2.0), DMF0, 1, 2	XSUB XSUB+

### External

File Extension	Subtitle Parser	Remark
.srt	SubRip	
.ssa/ .ass	SubStation Alpha	
.smi	SAMI	
.sub	SubViewer MicroDVD DVDSubtitleSystem SubIdx (VobSub)	SubViewer 1.0 & 2.0 Only
.txt	TMPlayer	

## System Features

### Panel

Panel type	X	
Resolution	X	
Visual angle	Horizontal	X
	Perpendicular	X
Max. brightness	X	
Response time	X	
H-Frequency	X	
V-Frequency	X	

### Audio

2 x 20 W Audio Output Power

### Network Connection

1 x Ethernet (LAN) for Internet connectivity

802.11 a/b/g/n/ac built in WLAN support

### Input/Output Ports

1 x RS232 port (3,5 mm)

1 x Ethernet port

1 x USB Type-C port

1 x USB 3.0 port

1 x USB 2.0 port

1 x Micro USB port (for touch only)

1 x Internal USB 2.0 port

1 x Micro SD port

4 x HDMI 2.0 In port (1.4 for FHD panels)

1 x IR port

1 x Headphone/Line Out port

1 x DisplayPort v1.2 In

1 x HDMI Out port

1 x SPDIF Optical Out port

1 x RJ12 port (for service use only)

### Power

110-240V AC 50-60Hz

### Weight (kg)

XXX

### Display Dimensions DxLxH (mm)

XXX

## Wireless LAN Transmitter Specifications

Frequency Ranges	Max Output Power
2400 - 2483,5 MHz (CH1 - CH13)	< 100 mW
5150 - 5250 MHz (CH36 - CH48)	< 200 mW (*)
5250 - 5350 MHz (CH52 - CH64)	< 200 mW (*)
5470 - 5725 MHz (CH100 - CH140)	< 200 mW (*)

(\*) '< 100 mW' for the Ukraine

### Country Restrictions

The Wireless LAN equipment is intended for home and office use in all EU countries, the UK and Ireland (and other countries following the relevant EU and/or UK directive) without any limitation except for the countries mentioned below.

Country	Restriction
Bulgaria	General authorisation required for outdoor use and public service
Italy	If used outside of own premises, general authorisation is required
Greece	Indoor use only for 5470 MHz to 5725 MHz band
Luxembourg	General authorisation required for network and service supply (not for spectrum)
Norway	Radio transmission is prohibited for the geographical area within a radius of 20 km from the centre of Ny-Alesund
Russian Federation	Indoor use only
Israel	5 GHz band only for 5180 MHz-5320 MHz range

The requirements for any country may change at any time. It's recommended that user checks with local authorities for the current status of their national regulations for 5 GHz wireless LAN's.

### Warning

Surges could cause data loss except monitoring modes.


## OPS PC



Disconnect the Display from the power supply before connecting or disconnecting the OPS. Failure to do so may cause damage to the OPS and/or the Display.

Open Pluggable Specification (OPS) is a standardised system architecture between displays and media players. It may be based on x86 or ARM structure. DS monitor complies with both structures.

### Rear Side Of The Display

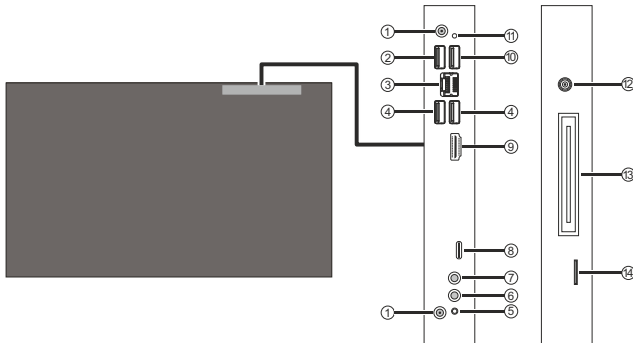


1. 2 x WLAN/BT Antenna Connectors
2. USB 2.0 port
3. RJ45 10/100/1000 Mbps Ethernet
4. 2 x USB 3.1 ports
5. On/Off Button
6. Mic In
7. Line Out
8. USB 3.1 Type-C port
9. HDMI Out
10. USB 3.0 port
11. Reset Button
12. DC In
13. JAE connector
14. SIM card slot

## OPS Connection Scheme

### **Warning**


Insert the OPS into the slot with the "This Side Out" warning label facing outside.

Your product has an 80 pin OPS standard connection interface. Interconnection of the product and another board (i.e. docking board, monitor board or main board...) is provided by JAE TX24/TX25 plug and receptacle connectors.

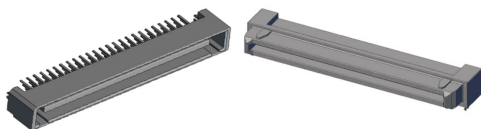


Left: Plug connector (p/n: TX25-80P)

Right: Receptacle connector (p/n: TX24-80P)

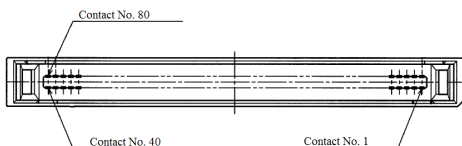

Plug Connector / TX25 Pinout

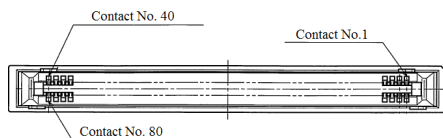

Receptacle Connector / TX24 Pinout

\*Connector series image, reference only.

## Specifications

<p><b>CPU:</b></p> <ul style="list-style-type: none"> <li>Intel® Comet Lake-U, i5 10th Gen. 10210U</li> <li>4 cores</li> <li>6MB Intel® smart cache</li> <li>15W TDP</li> </ul> <p><b>GPU:</b></p> <ul style="list-style-type: none"> <li>Intel® UHD Graphics for 10th Gen</li> </ul> <p><b>System Memory:</b></p> <ul style="list-style-type: none"> <li>2 x SO-DIMM DDR4</li> <li>Up to 32GB</li> </ul> <p><b>Network:</b></p> <ul style="list-style-type: none"> <li>RJ45 10/100/1000 Mbps</li> <li>M.2 2230 WLAN/BT Module 2.4 GHz + 5 GHz</li> <li>SIM card slot for 3G/4G</li> </ul> <p><b>Storage:</b></p> <ul style="list-style-type: none"> <li>M.2 2280 SATA SSD 256 GB</li> </ul>	<p><b>Input/Output Ports:</b></p> <ul style="list-style-type: none"> <li>1 x RJ45</li> <li>2 x USB 3.1 Gen2 Type-A</li> <li>1 x USB 3.0 Type-A</li> <li>1 x USB 2.0 Type-A</li> <li>1 x USB 3.1 Type-C</li> <li>1 x HDMI Out (4K2K resolution)</li> <li>1 x 3.5 mm Line out</li> <li>1 x 3.5 mm Mic in</li> <li>2 x WLAN/BT antenna</li> </ul> <p><b>Operating System:</b></p> <ul style="list-style-type: none"> <li>Windows 10 Pro 64 Bit / Windows 10 Home SL 64 Bit / Freedos (optional)</li> </ul> <p><b>Power Consumption:</b></p> <ul style="list-style-type: none"> <li>DC 12V – 3.5A</li> <li>DC 19V – 2.3A</li> </ul>
--	---

## PIN CONNECTIONS (JAE TX25-80)

PIN NO	Signal	Description	I/O
1	NC	No connection	-
2	NC	No connection	-
3	GND	Ground	-
4	NC	No connection	-
5	NC	No connection	-
6	GND	Ground	-
7	NC	No connection	-
8	NC	No connection	-
9	GND	Ground	-
10	NC	No connection	-
11	NC	No connection	-
12	GND	Ground	-
13	NC	No connection	-
14	NC	No connection	-
15	NC	No connection	-
16	GND	Ground	-
17	TMDS_CLK-	HDMI	IN
18	TMDS_CLK+	HDMI	IN
19	GND	Ground	-
20	TMDS0-	HDMI	IN
21	TMDS0+	HDMI	IN
22	GND	Ground	-
23	TMDS1-	HDMI	IN
24	TMDS1+	HDMI	IN
25	GND	Ground	-
26	TMDS2-	HDMI	IN
27	TMDS2+	HDMI	IN
28	GND	Ground	-
29	DDC_DATA	HDMI	IN/OUT
30	DDC_CLK	HDMI	IN/OUT
31	HDMI_HPD	HDMI	OUT
32	GND	Ground	-
33	+12V	Power	-
34	+12V	Power	-
35	+12V	Power	-
36	+12V	Power	-
37	+12V	Power	-
38	+12V	Power	-
39	+12V	Power	-
40	+12V	Power	-

41	NC	No connection	-
42	NC	No connection	-
43	NC	No connection	-
44	NC	No connection	-
45	NC	No connection	-
46	NC	No connection	-
47	NC	No connection	-
48	NC	No connection	-
49	NC	No connection	-
50	NC	No connection	-
51	UART_TXD	Transmitted UART data from Product to OPS	OUT
52	UART_RXD	Received UART data for Product	IN
53	GND	Ground	-
54	NC	No connection	-
55	NC	No connection	-
56	GND	Ground	-
57	NC	No connection	-
58	NC	No connection	-
59	GND	Ground	-
60	USB_PN2	USB2.0	IN/OUT
61	USB_PP2	USB2.0	IN/OUT
62	GND	Ground	-
63	USB_PN1	USB2.0	IN/OUT
64	USB_PP1	USB2.0	IN/OUT
65	GND	Ground	-
66	USB_PN0	USB2.0	IN/OUT
67	USB_PP0	USB2.0	IN/OUT
68	GND	Ground	-
69	NC	No connection	-
70	NC	No connection	-
71	NC	No connection	-
72	PB_DET	Pluggable Board Detect	IN
73	PS_ON#	Pluggable Signal ON	OUT
74	PWR_STATUS	PowerGood	IN
75	GND	Ground	-
76	GND	Ground	-
77	GND	Ground	-
78	GND	Ground	-
79	GND	Ground	-
80	GND	Ground	-


## OPS PC



Disconnect the Display from the power supply before connecting or disconnecting the OPS. Failure to do so may cause damage to the OPS and/or the Display.

Open Pluggable Specification (OPS) is a standardised system architecture between displays and media players. It may be based on x86 or ARM structure. DS monitor complies with both structures.

### Rear Side Of The Display

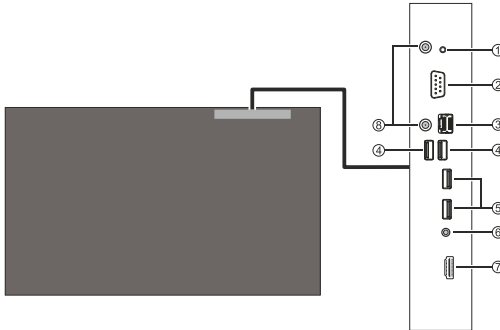


1. On/Off Button
2. RS232
3. RJ45 10/100/1000 Mbps Ethernet
4. 2 x USB 3.0 ports
5. 2 x USB 2.0 ports
6. Audio (In & Out)
7. HDMI Out
8. 2 x WLAN Antenna Connectors

## OPS Connection Scheme

### **Warning**

Insert the OPS into the slot with the “This Side Out” warning label facing outside.


Your product has an 80 pin OPS standard connection interface. Interconnection of the product and another board (i.e. docking board, monitor board or main board...) is provided by JAE TX24/TX25 plug and receptacle connectors.

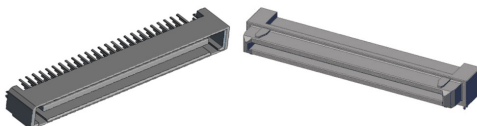


Left: Plug connector (p/n: TX25-80P)



Right: Receptacle connector (p/n: TX24-80P)

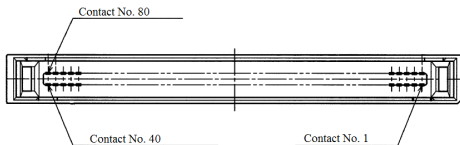

Plug Connector / TX25 Pinout

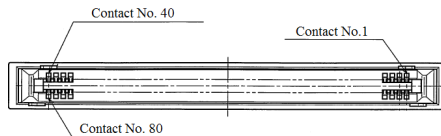

Receptacle Connector / TX24 Pinout

\*Connector series image, reference only.

## Specifications

<b>CPU:</b> Intel® Core™ i5-7200U (i5-7300U with vPro Support optional) 2 cores, 4 threads 3MB smart cache 15W TDP	<b>Storage:</b> 2.5" 500GB HDD (optional) 256GB SSD
<b>GPU:</b> Intel® HD Graphics 620, Integrated Max. 4K @30Hz	<b>Input/Output Ports:</b> 1 x RS232 1 x RJ45 2 x USB 3.0 (5V DC, 900mA) 2 x USB 2.0 (5V DC, 500mA) 1 x HDMI Out (only video, no hot plug) 1 x Audio (In & Out) 2 x WLAN antenna (optional)
<b>System Memory:</b> 2 x SO-DIMM DDR3L (DDR4 optional) Up to 32GB	<b>Operating System:</b> Windows 10 Pro 64 Bit / Windows 10 Home SL 64 Bit / Freedos (optional)
<b>Network:</b> LAN: 10/100/1000 Mbps LAN support WLAN: 802.11 a/c wireless support (optional) Bluetooth 4.0 (optional)	<b>Power Consumption:</b> DC 12V – 3.3A DC 19V – 2.2A

## PIN CONNECTIONS (JAE TX25-80)

PIN NO	Signal	Description	I/O
1	NC	No connection	-
2	NC	No connection	-
3	GND	Ground	-
4	NC	No connection	-
5	NC	No connection	-
6	GND	Ground	-
7	NC	No connection	-
8	NC	No connection	-
9	GND	Ground	-
10	NC	No connection	-
11	NC	No connection	-
12	GND	Ground	-
13	NC	No connection	-
14	NC	No connection	-
15	NC	No connection	-
16	GND	Ground	-
17	TMDS_CLK-	HDMI	IN
18	TMDS_CLK+	HDMI	IN
19	GND	Ground	-
20	TMDS0-	HDMI	IN
21	TMDS0+	HDMI	IN
22	GND	Ground	-
23	TMDS1-	HDMI	IN
24	TMDS1+	HDMI	IN
25	GND	Ground	-
26	TMDS2-	HDMI	IN
27	TMDS2+	HDMI	IN
28	GND	Ground	-
29	DDC_DATA	HDMI	IN/OUT
30	DDC_CLK	HDMI	IN/OUT
31	HDMI_HPD	HDMI	OUT
32	GND	Ground	-
33	+12V	Power	-
34	+12V	Power	-
35	+12V	Power	-
36	+12V	Power	-
37	+12V	Power	-
38	+12V	Power	-
39	+12V	Power	-
40	+12V	Power	-

41	NC	No connection	-
42	NC	No connection	-
43	NC	No connection	-
44	NC	No connection	-
45	NC	No connection	-
46	NC	No connection	-
47	NC	No connection	-
48	NC	No connection	-
49	NC	No connection	-
50	NC	No connection	-
51	UART_TXD	Transmitted UART data from Product to OPS	OUT
52	UART_RXD	Received UART data for Product	IN
53	GND	Ground	-
54	NC	No connection	-
55	NC	No connection	-
56	GND	Ground	-
57	NC	No connection	-
58	NC	No connection	-
59	GND	Ground	-
60	USB_PN2	USB2.0	IN/OUT
61	USB_PP2	USB2.0	IN/OUT
62	GND	Ground	-
63	USB_PN1	USB2.0	IN/OUT
64	USB_PP1	USB2.0	IN/OUT
65	GND	Ground	-
66	USB_PN0	USB2.0	IN/OUT
67	USB_PP0	USB2.0	IN/OUT
68	GND	Ground	-
69	NC	No connection	-
70	NC	No connection	-
71	NC	No connection	-
72	PB_DET	Pluggable Board Detect	IN
73	PS_ON#	Pluggable Signal ON	OUT
74	PWR_STATUS	PowerGood	IN
75	GND	Ground	-
76	GND	Ground	-
77	GND	Ground	-
78	GND	Ground	-
79	GND	Ground	-
80	GND	Ground	-

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

### IMPORTANT NOTE

#### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## Accessories Included

- Remote Control
- Batteries: 2 x AAA
- Instruction Book
- Quick Start Guide
- Wall Mount Kit
- OPS


## Information for Users on Disposal of Old Equipment and Batteries

### [European Union only]

Equipment bearing these symbols should not be disposed as general household waste.

You should look for appropriate recycling facilities and systems for the disposal of these products.

**Note:** The sign Pb below the symbol for batteries indicates that this battery contains lead.

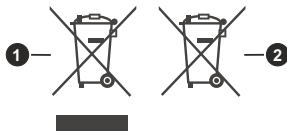

- 1 Products
- 2 Battery

## Licence Notification

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.




Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Vestel Elektronik Sanayi ve Ticaret A.S. is under license. Other trademarks and trade names are those of their respective owners.


This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a licence from Microsoft or an authorised Microsoft subsidiary.

## Vesa Wall Mount Measurements

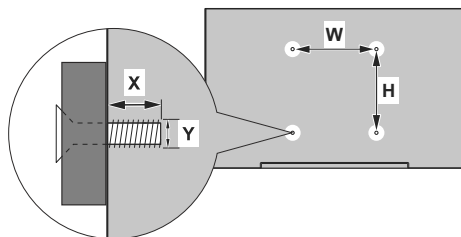

<b>Hole Pattern Sizes (mm)</b>	<b>W</b>	<b>H</b>
	XXX	XXX
<b>Screw Sizes</b>		
<b>Length (X)</b>	min. (mm)	X
	max. (mm)	X
<b>Thread (Y)</b>	MX	

## Installation On An Indented Wall

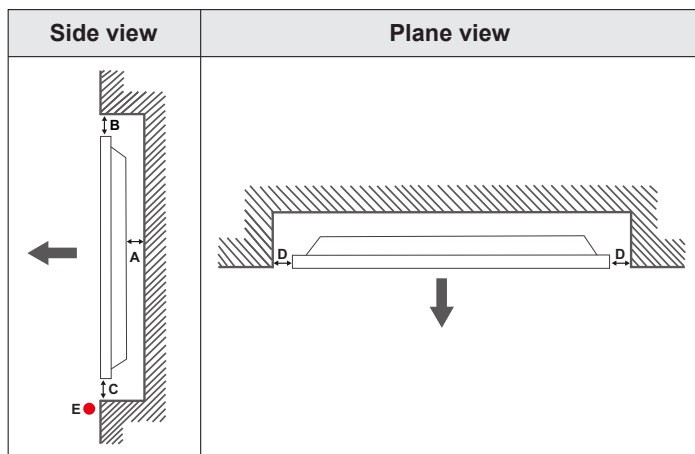

- A** Minimum 50 mm
- B** Minimum 70 mm
- C** Minimum 50 mm
- D** Minimum 50 mm
- E** Ambient temperature range: 0-35°C



When installing the product on an indented wall, allow at least the space specified above between the product and wall for ventilation and ensure that the ambient temperature is kept between 0°C-35°C.

Do not expose the product to direct sunlight.

We will take no responsibility for any damages or failures in case our products are not being used subject to these recommendations and/or instructions for use.